



A propos de ce livre

Ceci est une copie numérique d'un ouvrage conservé depuis des générations dans les rayonnages d'une bibliothèque avant d'être numérisé avec précaution par Google dans le cadre d'un projet visant à permettre aux internautes de découvrir l'ensemble du patrimoine littéraire mondial en ligne.

Ce livre étant relativement ancien, il n'est plus protégé par la loi sur les droits d'auteur et appartient à présent au domaine public. L'expression "appartenir au domaine public" signifie que le livre en question n'a jamais été soumis aux droits d'auteur ou que ses droits légaux sont arrivés à expiration. Les conditions requises pour qu'un livre tombe dans le domaine public peuvent varier d'un pays à l'autre. Les livres libres de droit sont autant de liens avec le passé. Ils sont les témoins de la richesse de notre histoire, de notre patrimoine culturel et de la connaissance humaine et sont trop souvent difficilement accessibles au public.

Les notes de bas de page et autres annotations en marge du texte présentes dans le volume original sont reprises dans ce fichier, comme un souvenir du long chemin parcouru par l'ouvrage depuis la maison d'édition en passant par la bibliothèque pour finalement se retrouver entre vos mains.

Consignes d'utilisation

Google est fier de travailler en partenariat avec des bibliothèques à la numérisation des ouvrages appartenant au domaine public et de les rendre ainsi accessibles à tous. Ces livres sont en effet la propriété de tous et de toutes et nous sommes tout simplement les gardiens de ce patrimoine. Il s'agit toutefois d'un projet coûteux. Par conséquent et en vue de poursuivre la diffusion de ces ressources inépuisables, nous avons pris les dispositions nécessaires afin de prévenir les éventuels abus auxquels pourraient se livrer des sites marchands tiers, notamment en instaurant des contraintes techniques relatives aux requêtes automatisées.

Nous vous demandons également de:

- + *Ne pas utiliser les fichiers à des fins commerciales* Nous avons conçu le programme Google Recherche de Livres à l'usage des particuliers. Nous vous demandons donc d'utiliser uniquement ces fichiers à des fins personnelles. Ils ne sauraient en effet être employés dans un quelconque but commercial.
- + *Ne pas procéder à des requêtes automatisées* N'envoyez aucune requête automatisée quelle qu'elle soit au système Google. Si vous effectuez des recherches concernant les logiciels de traduction, la reconnaissance optique de caractères ou tout autre domaine nécessitant de disposer d'importantes quantités de texte, n'hésitez pas à nous contacter. Nous encourageons pour la réalisation de ce type de travaux l'utilisation des ouvrages et documents appartenant au domaine public et serions heureux de vous être utile.
- + *Ne pas supprimer l'attribution* Le filigrane Google contenu dans chaque fichier est indispensable pour informer les internautes de notre projet et leur permettre d'accéder à davantage de documents par l'intermédiaire du Programme Google Recherche de Livres. Ne le supprimez en aucun cas.
- + *Rester dans la légalité* Quelle que soit l'utilisation que vous comptez faire des fichiers, n'oubliez pas qu'il est de votre responsabilité de veiller à respecter la loi. Si un ouvrage appartient au domaine public américain, n'en déduisez pas pour autant qu'il en va de même dans les autres pays. La durée légale des droits d'auteur d'un livre varie d'un pays à l'autre. Nous ne sommes donc pas en mesure de répertorier les ouvrages dont l'utilisation est autorisée et ceux dont elle ne l'est pas. Ne croyez pas que le simple fait d'afficher un livre sur Google Recherche de Livres signifie que celui-ci peut être utilisé de quelque façon que ce soit dans le monde entier. La condamnation à laquelle vous vous exposeriez en cas de violation des droits d'auteur peut être sévère.

À propos du service Google Recherche de Livres

En favorisant la recherche et l'accès à un nombre croissant de livres disponibles dans de nombreuses langues, dont le français, Google souhaite contribuer à promouvoir la diversité culturelle grâce à Google Recherche de Livres. En effet, le Programme Google Recherche de Livres permet aux internautes de découvrir le patrimoine littéraire mondial, tout en aidant les auteurs et les éditeurs à élargir leur public. Vous pouvez effectuer des recherches en ligne dans le texte intégral de cet ouvrage à l'adresse <http://books.google.com>



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>


TM 11-6625-450-15

MEN T OF THE ARMY TECHNICAL MANUAL

**ANIZATIONAL, DS, GS, AND DEPOT
INTENANCE MANUAL INCLUDING
REPAIR PARTS**

BATTERY TESTERS

**TS-183/U, TS-183A/U
AND TS-183B/U**

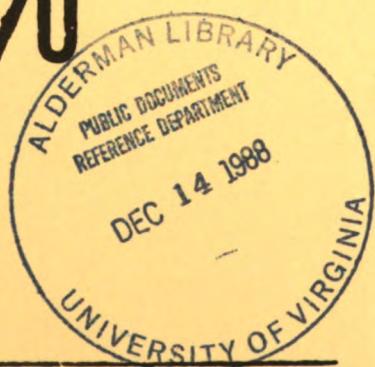

This copy is a reprint which includes current
pages from Change 1.

ARTERS, DEPARTMENT OF THE ARMY

MAY 1967



Technical Manual
No. 11-6625-450-15 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D. C., 19 May 1967

**Organizational, Direct Support, General Support, and
Depot Maintenance Manual Including Repair Parts
BATTERY TESTERS TS-183/U, TS-183A/U AND TS-183B/U**

CHAPTER	Section	1. INTRODUCTION	Paragraph	Page
		I. General		
		Scope	1-1	1-1
		Indexes of publications	1-2	1-1
		Forms and records	1-3	1-1
		Reporting of Equipment Publication Improvements	1-3.1	1-1
		II. Description and data		
		Purpose and use	1-4	1-1
		Technical characteristics	1-5	1-1
		Items comprising an operable equipment	1-5.1	1-2
		Description of equipment	1-6	1-2
		External differences in models	1-7	1-2
CHAPTER	Section	2. INSTALLATION AND OPERATING INSTRUCTIONS		
		I. Service upon receipt of equipment		
		Unpacking	2-1	2-1
		Checking unpacked equipment	2-2	2-1
		II. Operation		
		Damage from improper settings	2-3	2-3
		Voltmeter, switch, and jacks	2-4	2-3
		Preliminary procedures	2-5	2-3
		Operating procedures	2-6	2-3
CHAPTER	Section	3. OPERATOR'S AND ORGANIZATIONAL MAINTENANCE		
		Scope of maintenance	3-1	3-1
		Preventive maintenance	3-2	3-1
		Preventive maintenance checks and services periods	3-3	3-1
		Operator's daily preventive maintenance checks and services chart	3-4	3-2
		Operator's weekly preventive maintenance checks and services chart	3-5	3-2
		Organizational monthly preventive maintenance checks and services chart	3-6	3-2
		Cleaning	3-7	3-3
		Rustproofing and painting	3-8	3-3
		General troubleshooting information	3-9	3-3
		Organizational troubleshooting chart	3-10	3-10
		Adjustment of jack control springs	3-11	3-11
CHAPTER	Section	4. FUNCTIONING AND TROUBLESHOOTING		
		I. Functioning		
		Circuit switching	4-1	4-1

*This manual supersedes TM 11-6625-450-25P, 21 August 1964; and together with TB 11-6625-450-10/1, 23 November 1965, supersedes TM 11-2571, 19 February 1952, including C 4, 27 February 1962, C 5, 9 October 1963, and C 6, 17 September 1964.

		Paragraph	Page
CHAPTER	4. FUNCTIONING AND TROUBLESHOOTING — Continued		
	Internal differences	4-2	4-1
II.	Troubleshooting		
	General instructions	4-3	4-3
	Organization of troubleshooting procedures	4-4	4-3
	Test equipment required	4-5	4-3
	Localizing troubles	4-6	4-3
CHAPTER	5. GENERAL SUPPORT TESTING PROCEDURES		
	General	5-1	5-1
	Test equipment	5-2	5-1
	Physical tests and inspection	5-3	5-3
	Voltmeter test	5-4	5-4
	Resistance test	5-5	5-7
	Test data summary	5-6	5-8
6.	DEPOT OVERHAUL STANDARDS		
	Applicability of depot overhaul standards	6-1	6-1
	Applicable references	6-2	6-1
	Test facilities required	6-3	6-1
	Tests	6-4	6-1
7.	SHIPMENT, LIMITED STORAGE, AND DEMOLITION		
	TO PREVENT ENEMY USE		
	Repacking for shipment and limited storage	7-1	7-1
	Authority for demolition	7-2	7-1
	Methods of destruction	7-3	7-1
APPENDIX	A. REFERENCES		A-1
	B. BASIC ISSUE ITEMS LIST (BIIL) AND ITEMS TROOP INSTALLED OR AUTHORIZED LIST (ITIAL) (NOT APPLICABLE)		
	C. MAINTENANCE ALLOCATION		C-1
	D. ORGANIZATIONAL, DS, GS, AND DEPOT MAINTENANCE REPAIR PARTS		D-1

Technical Manual }
No. 11-6625-450-15 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D. C., 19 May 1967

**Organizational, Direct Support, General Support, and
Depot Maintenance Manual Including Repair Parts
BATTERY TESTERS TS-183/U, TS-183A/U AND TS-183B/U**

CHAPTER	Section	Paragraph	Page
CHAPTER 1	1. INTRODUCTION		
	1. General		
	Scope	1-1	1-1
	Indexes of publications	1-2	1-1
	Forms and records	1-3	1-1
	Reporting of Equipment Publication Improvements	1-3.1	1-1
	II. Description and data		
	Purpose and use	1-4	1-1
	Technical characteristics	1-5	1-1
	Items comprising an operable equipment	1-5.1	1-2
Description of equipment	1-6	1-2	
External differences in models	1-7	1-2	
CHAPTER 2	2. INSTALLATION AND OPERATING INSTRUCTIONS		
	I. Service upon receipt of equipment		
	Unpacking	2-1	2-1
	Checking unpacked equipment	2-2	2-1
	II. Operation		
	Damage from improper settings	2-3	2-3
	Voltmeter, switch, and jacks	2-4	2-3
	Preliminary procedures	2-5	2-3
	Operating procedures	2-6	2-3
	III. Operator's and organizational maintenance		
Scope of maintenance	3-1	3-1	
Preventive maintenance	3-2	3-1	
Preventive maintenance checks and services periods	3-3	3-1	
Operator's daily preventive maintenance checks and services chart	3-4	3-2	
Operator's weekly preventive maintenance checks and services chart	3-5	3-2	
Organizational monthly preventive maintenance checks and services chart	3-6	3-2	
Cleaning	3-7	3-3	
Rustproofing and painting	3-8	3-3	
General troubleshooting information	3-9	3-3	
Organizational troubleshooting chart	3-10	3-10	
Adjustment of jack control springs	3-11	3-11	
CHAPTER 4	4. FUNCTIONING AND TROUBLESHOOTING		
	I. Functioning		
Circuit switching	4-1	4-1	

*This manual supersedes TM 11-6625-450-25P, 21 August 1964; and together with TB 11-6625-450-10/1, 23 November 1965, supersedes TM 11-2571, 19 February 1952, including C 4, 27 February 1962, C 5, 9 October 1963, and C 6, 17 September 1964.

CHAPTER	Section	Paragraph	Page
	4. FUNCTIONING AND TROUBLESHOOTING — Continued	4-2	4-1
	Internal differences	4-3	4-3
	II. Troubleshooting		
	General instructions	4-4	4-3
	Organization of troubleshooting procedures	4-5	4-3
	Test equipment required	4-6	4-3
	Localizing troubles	4-6	4-3
CHAPTER	5. GENERAL SUPPORT TESTING PROCEDURES		
	General	5-1	5-1
	Test equipment	5-2	5-1
	Physical tests and inspection	5-3	5-3
	Voltmeter test	5-4	5-4
	Resistance test	5-5	5-7
	Test data summary	5-6	5-8
	6. DEPOT OVERHAUL STANDARDS		
	Applicability of depot overhaul standards	6-1	6-1
	Applicable references	6-2	6-1
	Test facilities required	6-3	6-1
	Tests	6-4	6-1
	7. SHIPMENT, LIMITED STORAGE, AND DEMOLITION		
	TO PREVENT ENEMY USE		
	Repacking for shipment and limited storage	7-1	7-1
	Authority for demolition	7-2	7-1
	Methods of destruction	7-3	7-1
APPENDIX	A. REFERENCES		A-1
	B. BASIC ISSUE ITEMS LIST (BIIL) AND ITEMS TROOP INSTALLED OR AUTHORIZED LIST (ITIAL) (NOT APPLICABLE)		
	C. MAINTENANCE ALLOCATION		C-1
	D. ORGANIZATIONAL, DS, GS, AND DEPOT MAINTENANCE REPAIR PARTS		D-1



Figure 1-1. Battery Tester TS-183/U or TS-183A/U.

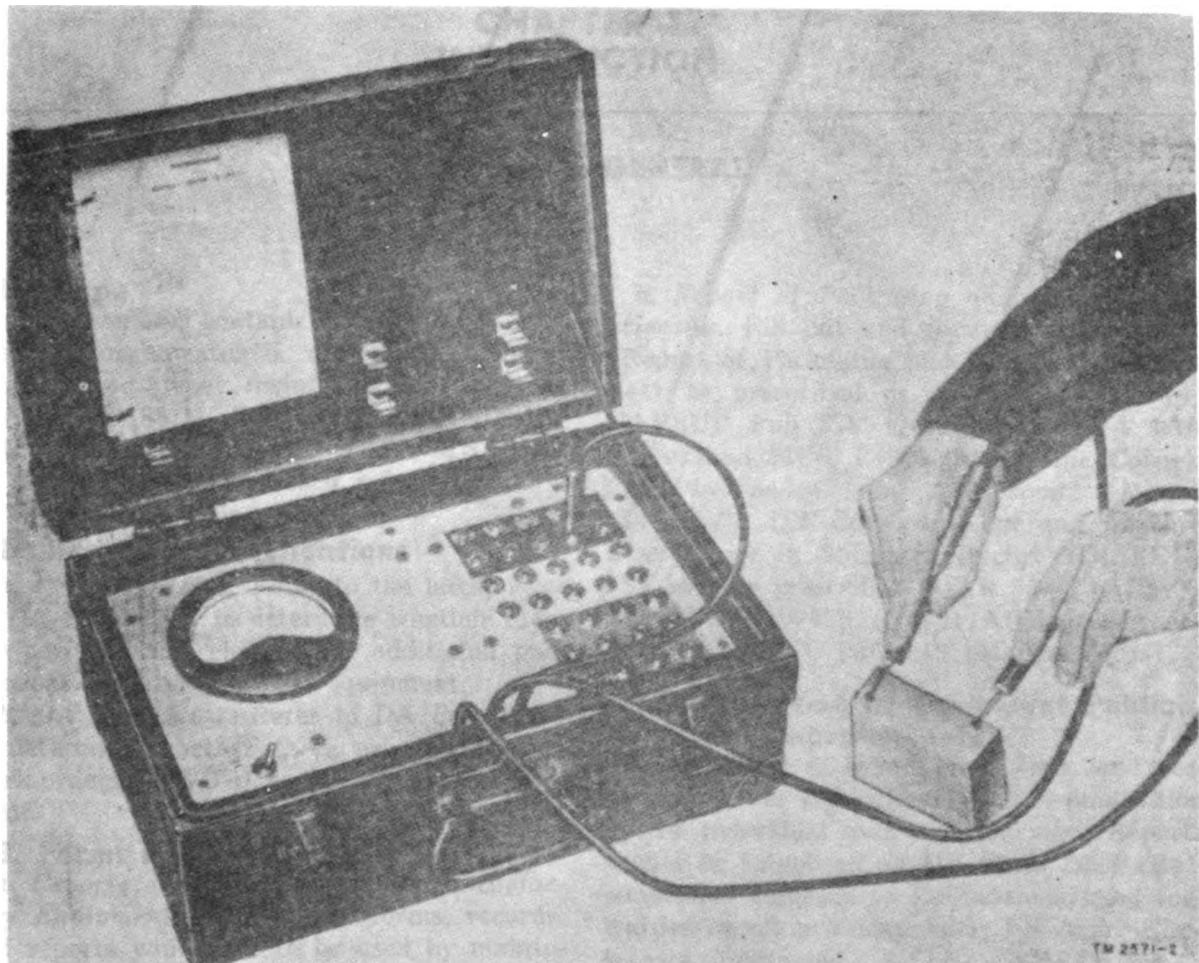


Figure 1-2. Battery Tester TS-183B/U.

CHAPTER 1 INTRODUCTION

Section 1. GENERAL

1-1. Scope

a. This manual contains instructions for the operator, organizational, direct, and general support, and depot maintenance of Battery Testers TS-183/U, TS-183A/U, and TS-183B/U. Battery Testers TS-183/U, TS-183A/U, and TS-183B/U are each referred to as a *battery tester* in this manual.

1-2. Indexes and Publications

a. DA Pam 310-4. Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

b. DA Pam 310-7. Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

1-3. Forms and Records

a. *Reports of Maintenance and Unsatisfactory Equipment.* Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

b. *Report of Packaging and Handling Deficiencies.* Fill out and forward DD Form 6 (Report of Packaging and Handling Deficiencies) as prescribed in AR 700-58 (Army)/NAVSUP Pub 378 (Navy)/AFR 71-4 (Air Force)/and MCO P4030.29 (Marine Corps).

c. *Discrepancy in Shipment Report (DISREP)* (SF 361). Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38 (Army)/NAVSUP Pub 459 (Navy)/AFM 75-34 (Air Force)/and MCO P4610.19 (Marine Corps).

1-3.1. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-C, Fort Monmouth, NJ 07703.

Section II. DESCRIPTION AND DATA

1-4. Purpose and Use

Battery Tester TS-183/U, TS-183A/U, or TS-183B/U is used to measure the terminal voltages of dry batteries. The voltage rating of these batteries may range from 1.3 to 200 volts. With a multirange voltmeter, a set of load resistors, and a jack-switching arrangement that gives a total of 32 different load resistor combinations, a rapid and accurate check of dry batteries, under a load, can be made.

1-5. Technical Characteristics

Type Multirange instrument which uses

a 1-milliamperc dc voltmeter of the D'Arsonval type.

Voltmeter range 0 to 2 volts (black scale).
0 to 10 volts (green scale).
0 to 50 volts (yellow scale).
0 to 200 volts (red scale).

Weight 15 pounds.

1-5.1. Items Comprising an Operable Equipment

Battery Testers TS-183/U, TS-183A/U and TS-183B/U (FSN 6625-224-5174) each of the three comprises an operable equipment.

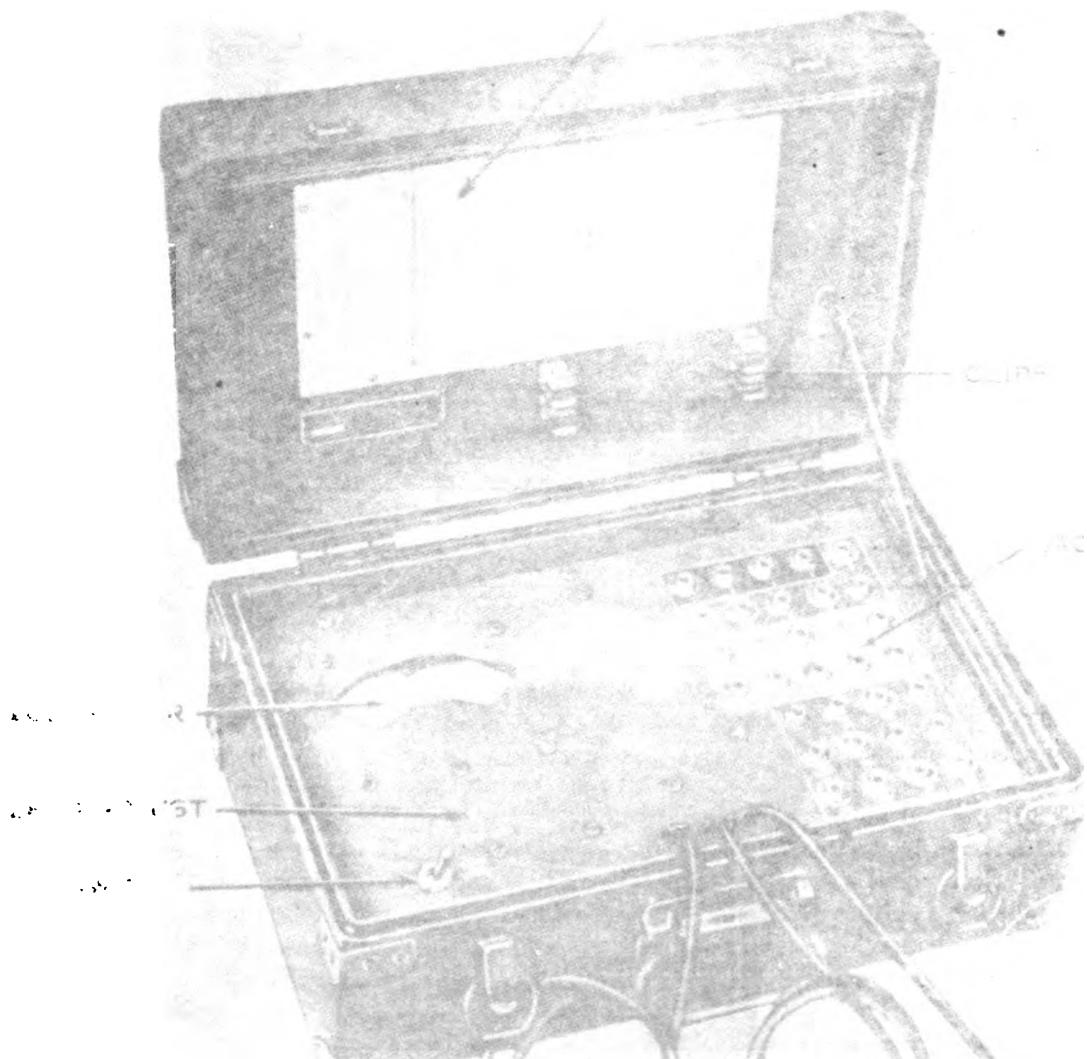


Figure 1-3. Battery Testers TS-183/1 and TS-183A/1, with case open.

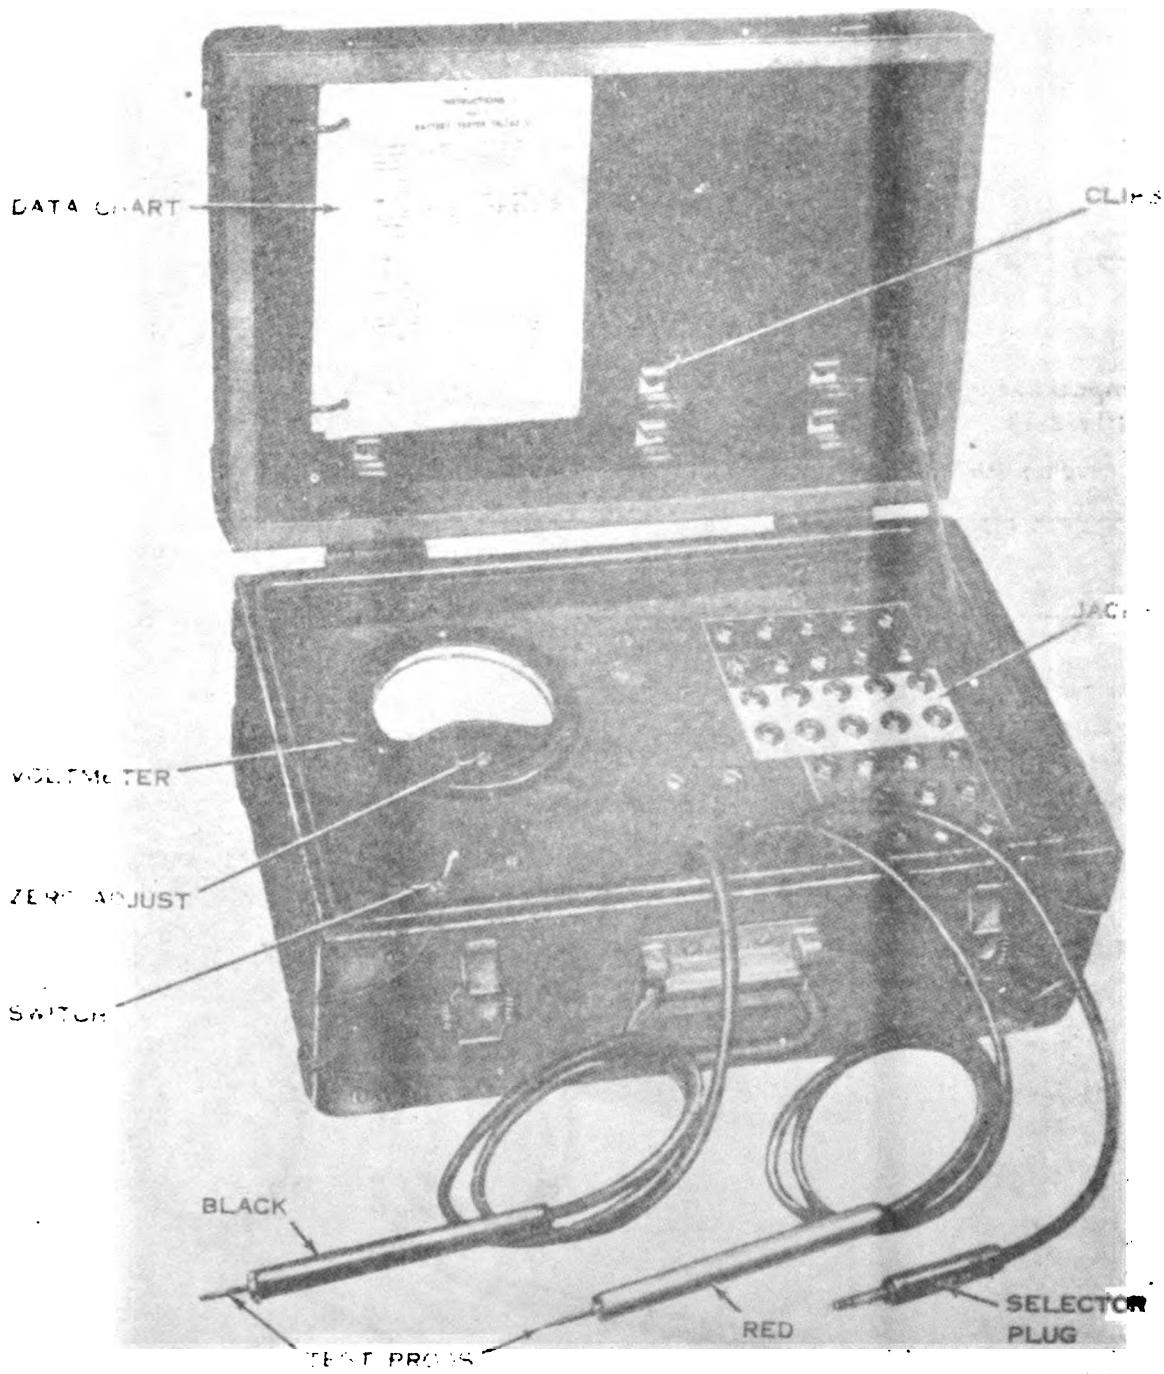


Figure 1-4. Battery Tester TS-155B 1, with case open.

CHAPTER 2

INSTALLATION AND OPERATING INSTRUCTIONS

Section 1. SERVICE UPON RECEIPT OF EQUIPMENT

2-1. Unpacking

(fig. 2-1)

a. *Packaging Data.* The approximate dimensions, weight, and volume of a battery tester, packed and unpacked, are as follows:

	Dimensions (in.)			Volume cu ft	Weight lb
	Height	Width	Depth		
	7 1/8	9 1/2	15		
Unpacked	10	15	18	0.587	15
Packed				1.56	25

b. *Unpacking.*

(1) *Domestic packaging.*

(a) Slit the seam along the cover of the outer corrugated carton. Fold back the cover flaps, and open the moisture-vaporproof barrier.

(b) Slit the top seam of the water-resistant, inner corrugated carton and open it.

(c) Remove the technical manual.

(d) Remove the battery tester from the package.

(2) *Export packaging.*

(a) Cut and fold back the metal straps.

(b) With a nailpuller, remove the nails from the wooden packing case. Do not attempt to pry off the wooden cover; the equipment may become damaged.

(c) Open the moisture-vaporproof barrier and expose the outer corrugated carton.

(d) Proceed as described in (1) above.

2-2. Checking Unpacked Equipment

a. Inspect the equipment for damage in-


curred during shipment. If the equipment has been damaged, report the damage on DD Form 6 (para 1-3b).

b. Check to see that the equipment is complete as listed on the packing slip. Report all discrepancies in accordance with TM 38-750 (para 1-3a). Shortage of a minor assembly or part that does not affect proper functioning of the equipment should not prevent use of the equipment.

c. If the equipment has been used or reconditioned, see whether it has been changed by a modification work order (MWO). If the equipment has been modified, the MWO number will appear on the front panel near the nomenclature plate. If the equipment has been modified, check to see that any operational instruction changes which result from the modification have been entered in the equipment manual.

Note. Current MWO's applicable to the equipment are listed in DA Pam 310-4.

I 11-6625-450-15

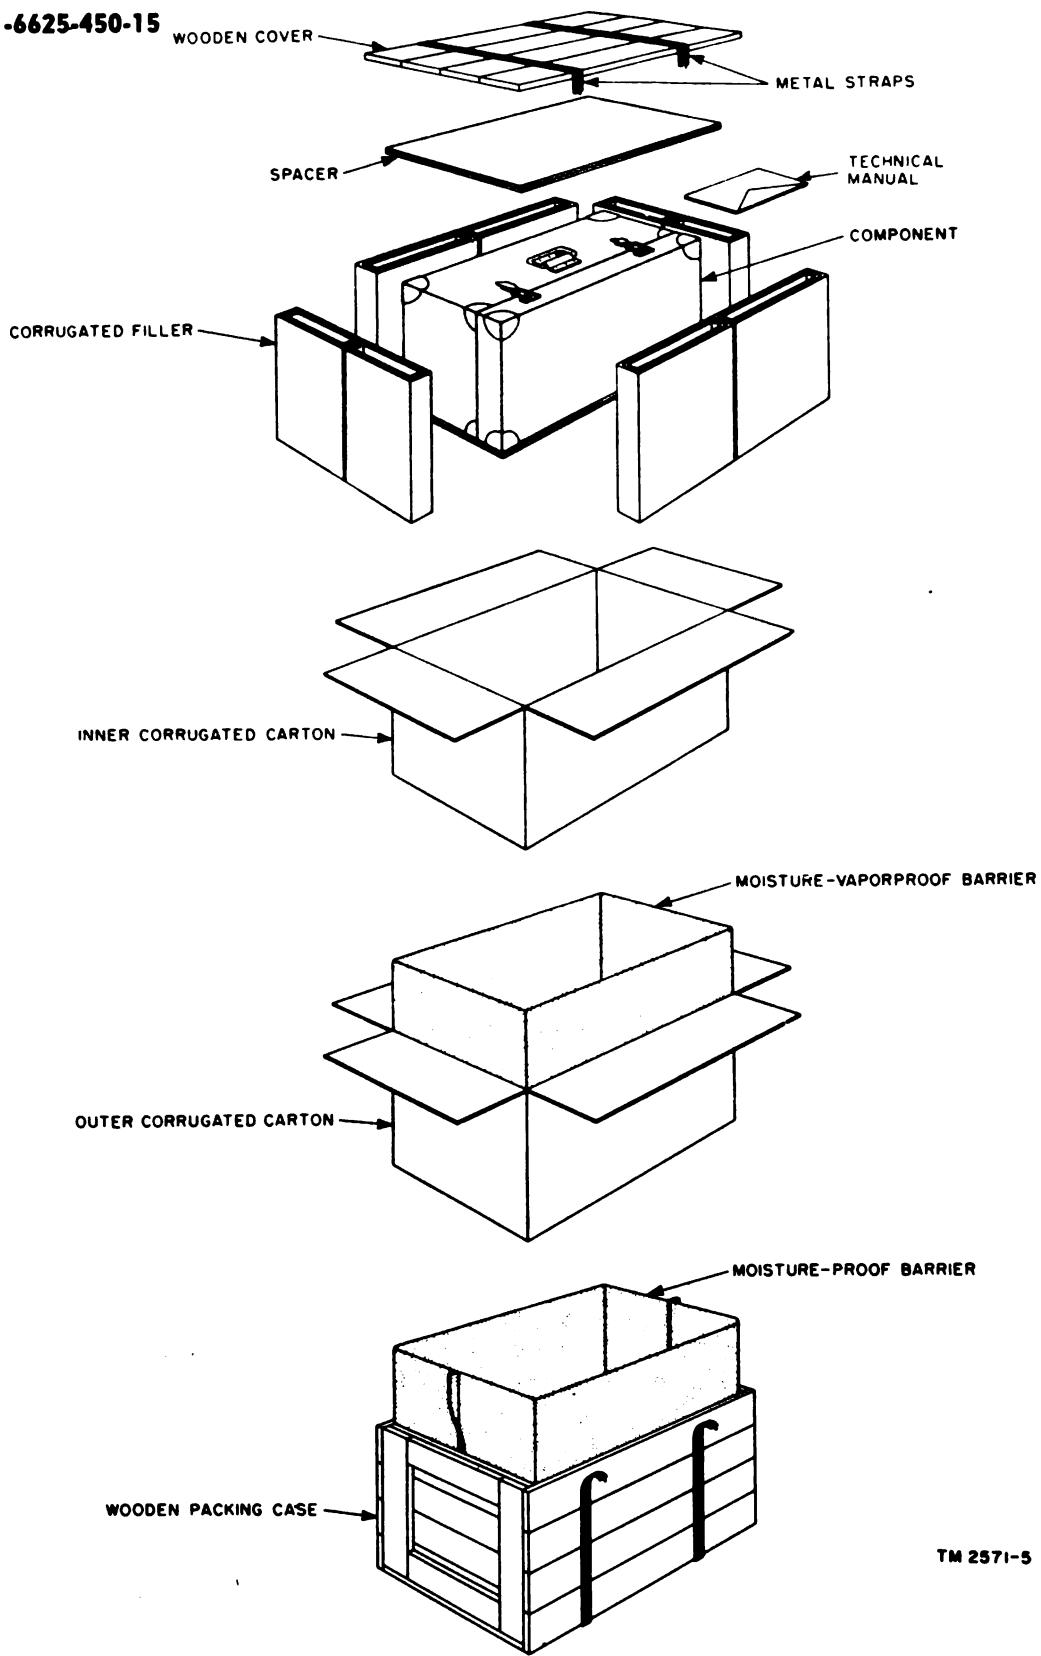

TM 2571-5

Figure 2-1. Battery tester, packaging diagram.

Section II. OPERATION

2-3. Damage from Improper Settings

Haphazard operation or use of improper jacks can damage the battery tester; therefore, knowledge of the function of the voltmeter, the NO LOAD-TEST LOAD switch, and the selector plug before operation of the battery tester is important. Refer to paragraphs 2-4, 2-5, and 2-6.

2-4. Voltmeter, Switch, and Jacks (fig. 1-3 and 1-4)

The chart below lists the voltmeter, the switch, and jacks of the battery tester and indicates their functions:

Item	Function
Voltmeter -----	Indicates the voltage value of the dry battery under test. <i>Sw pos</i> Function
NO LOAD-TEST LOAD switch.	NO LOAD -- With switch depressed to NO LOAD, dry battery is tested under a no-load condition. TEST LOAD Dry battery is tested under a load condition.
Jacks (numbered 1 through 32).	Provide connection to a load for dry battery under test.

2-5. Preliminary Procedures (fig. 1-3 and 1-4)

- a. Release the catches on the front of the case and open the cover.
- b. Remove the test prods from their retaining clips in the cover.

c. Observe the meter pointer on the voltmeter for position; if it is not on 0, adjust it by carefully turning the zero adjust screw with a screwdriver.

2-6. Operating Procedures

a. Refer to the test data (TB 11-6625-450-10/1) attached to the inside of the cover of the battery tester, to determine the correct jack number and minimum, permissible voltage for the dry battery being tested.

Caution: Be extremely careful to select the proper jack for the dry battery that is being tested. Use of a wrong jack may result in a damaged meter or a burned-out load resistor.

b. When the proper jack has been determined for the dry battery being tested, insert the selector plug in the jack.

c. With the NO LOAD-TEST LOAD switch set to TEST LOAD, apply the black test prod to the negative terminal, and the red test prod to the positive terminal of the dry battery to be tested. This test should be done in approximately 5 seconds, and under no circumstances should this test exceed 15 seconds. As noted in the test data (TB 11-6625-450-10/1), when certain types of batteries are being tested, the NO LOAD-TEST LOAD switch will be set to NO LOAD.

d. Compare the indication of the voltmeter with the minimum, permissible voltage requirement given in the test data (TB 11-6625-450-10/1) to determine whether the dry battery is to be issued or rejected.

CHAPTER 3

OPERATOR'S AND ORGANIZATIONAL MAINTENANCE

3-1. Scope of Maintenance

a. The maintenance duties assigned to the operator of the battery tester are listed below, together with a reference to the paragraphs covering the specific maintenance functions. The duties assigned do not require tools or test equipment other than those issued with the equipment.

- (1) Operator's daily preventive maintenance checks and services (para 3-4).
- (2) Operator's weekly preventive maintenance checks and services (para 3-5).
- (3) Cleaning (para 3-7).

b. The maintenance duties assigned to the organizational maintenance repairman of the battery tester are listed below, together with a reference to the paragraphs covering the specific functions. The duties assigned do not require tools or test equipment other than those issued with the equipment.

- (1) Organizational monthly preventive maintenance checks and services (para 3-6).
- (2) Rustproofing and painting (para 3-8).
- (3) Organizational troubleshooting chart (para 3-10).

3-2. Preventive Maintenance

Preventive maintenance is the systematic care, servicing, and inspection of equipment to prevent the occurrence of trouble, reduce downtime, and assure that the equipment is serviceable.

a. *Systematic Care.* The procedures given in paragraphs 3-4 through 3-7 cover routine

systematic care and cleaning essential to proper upkeep and operation of the equipment.

b. *Preventive Maintenance Checks and Services.* The preventive maintenance checks and services charts (para 3-4, 3-5, and 3-6) outline functions to be performed at specific intervals. These checks and services are designed to maintain Army equipment in a combat-serviceable condition; that is, in good general (physical) condition and in good operating condition. To assist operators and organizational repairmen to maintain combat serviceability of the equipment, the charts indicate what to check, how to check, and what the normal conditions are; the *references* column lists the paragraphs that contain detailed repair or replacement procedures. If the defect cannot be remedied by the operator, a higher category of maintenance repair is required. Records and reports of these checks and services must be made in accordance with TM 38-750.

3-3. Preventive Maintenance Checks and Services Periods

Preventive maintenance checks and service of the equipment are required daily, weekly, and monthly.

a. Paragraph 3-4 specifies the checks and services that must be done daily, and under the special conditions listed below:

- (1) Before the battery tester is taken on a mission.
- (2) When the battery tester is initially installed.
- (3) When the battery tester is reinstalled after removal for any reason.

- (4) At least once a week, if the equipment is maintained in standby condition.
- b. Paragraphs 3-5 and 3-6 specify additional checks and services that must be performed on a weekly and monthly basis, respectively. Perform the maintenance functions indicated in the monthly preventive maintenance checks and services chart (para 3-6) once each month. A month is defined as approximately 30 calendar days of 8-hour-per-day operation. If the equipment is oper-

ated 16 hours a day, the monthly preventive maintenance checks and services should be performed at 15-day intervals. Adjustment of the maintenance interval must be made to compensate for any unusual operating conditions. Equipment maintained in a standby (ready for immediate operation) condition must have monthly preventive maintenance checks and services. Equipment in limited storage (requires service before operation) does not require monthly preventive maintenance.

3-4. Operator's Daily Preventive Maintenance Checks and Services Chart

Sequence No.	Item to be inspected	Procedure	References
1	Battery tester -----	Check equipment for completeness and general condition.	Appx B.
2	Exterior surfaces -----	Clean exterior surfaces of the equipment.	Para 3-7.
3	External receptacles -----	Inspect external receptacles for breakage and for firm seating.	
4	Meter glass -----	Inspect front panel glass window for damaged housing, broken glass, physical damage, dust, or moisture.	
5	Switch -----	During operation (item 6) check switch for proper mechanical action. Action must be positive, without backlash, binding, or scraping.	
6	Operation -----	During operation, be alert for any abnormal indications	

3-5. Operator's Weekly Preventive Maintenance Checks and Services Chart

Sequence No.	Item to be inspected	Procedure	References
1	Cables -----	Inspect external cables for cuts, cracked or gouged jackets, fraying, or kinks.	
2	Hardware -----	Inspect all exterior hardware for looseness and damage. The battery tester cover, carrying handle, hinges, and all bolts and screws must be tight and not damaged.	
3	Preservation -----	Inspect the equipment to determine that it is free of bare spots, rust, and corrosion. If these conditions exist, refer to a higher maintenance category for repair.	Para 3-7 and 3-8.

3-6. Organizational Monthly Preventive Maintenance Checks and Services Chart

Sequence No.	Item to be inspected	Procedure	References
1	Publications -----	Inspect the manual for completeness and to see if it is in usable condition. Be sure that all changes to the manual are on hand.	DA Pam 310-4.

Sequence No.	Item to be Inspected	Procedure	Reference
2	Modification work orders -----	Check to see that all URGENT MWO's have been applied, and that all NORMAL MWO's have been scheduled.	DA Pam 810-4.
3	Completeness -----	Check the equipment for completeness and general condition.	Appx B.
4	Cleanliness -----	Clean the exterior surfaces of the equipment.	Para 3-7.
5	Preservation -----	Inspect the equipment to determine that it is free of bare spots, rust, and corrosion.	Para 3-8.
6	External receptacles -----	Inspect the external receptacles for breakage and for firm seating.	
7	Meter glass -----	Inspect the front panel glass window for damaged housing, broken glass, physical damage, dust, or moisture.	
8	Cables -----	Inspect the external cables for cuts, cracked or gouged jackets, fraying, or kinks.	
9	Hardware -----	Inspect all exterior hardware for looseness and damage. The battery tester cover, carrying handle, hinges, and all bolts and screws must be tight and not damaged.	
10	Operation -----	During operation, be alert for any abnormal indications.	

3-7. Cleaning

Inspect the exterior of the battery tester. The exterior surface should be free of dust, dirt, grease, and fungus.

a. Remove the dust and loose dirt with a clean, soft cloth.

Warning: Cleaning compound is flammable and its fumes are toxic. Provide adequate ventilation. *Do not use near a flame.*

b. Remove grease, fungus, and ground-in dirt from the cases; use a cloth dampened (not wet) with Cleaning Compound (Federal stock No. 7980-395-9542).

c. Remove dust or dirt from plugs and jacks with a brush.

Caution: Do not press on the meter face (glass) when cleaning; the meter may become damaged.

d. Clean the front panel and meter; use a soft, clean cloth. If necessary, dampen the cloth with water; mild soap may be used for more effective cleaning.

3-8. Rustproofing and Painting

a. **Rustproofing.** When the finish on the battery tester has become badly scarred or damaged, rust and corrosion can be prevented by touching up the bare surface. Use No. 000 sandpaper to clean the surface down to the bare metal. Obtain a bright, smooth finish.

b. **Painting.** Remove the rust and corrosion from metal surfaces by lightly sanding them with fine sandpaper. Brush two thin coats of paint on the bare metal to protect it from further corrosion. Refer to the applicable cleaning and refinishing practices specified in TB SIG 864.

3-9. General Troubleshooting Information

Troubleshooting this equipment is based on the operational check (para 2-5 and 2-6). To troubleshoot the equipment, perform the operational functions of the battery tester (para 2-5 and 2-6) until an abnormal condition or result is observed. Note the abnormal condition or result and refer to the troubleshooting

chart (para 3-10). Perform the checks and corrective actions indicated in the troubleshooting chart. If the corrective measures in-

dicated do not result in correction of the trouble, a higher maintenance category of repair is required.

3-10. Organizational Troubleshooting Chart

Item No.	Trouble symptom	Probable trouble	Checks and corrective measures
1	During operation, voltmeter does not indicate.	a. Open test probe b. Corroded or dirty test lead probe. c. Defective voltmeter	a. Repair, or replace test leads. b. Clean test lead probe. c. Refer to a higher maintenance repair category.
2	Voltmeter does not indicate within tolerance.	Defective voltmeter multiplier resistor, or resistors.	Refer to a higher maintenance repair category.
3	Voltmeter cannot be zero adjusted.	Defective voltmeter	Refer to a higher maintenance repair category.
4	During operation, voltmeter indication does not increase when NO LOAD-TEST LOAD switch is set to NO LOAD.	Defective switch	Refer to a higher maintenance repair category.

3-11. Adjustment of Jack Contact Springs

When the contact springs on the jacks require adjustment, bend them either by hand

or with long-nosed pliers. Be careful when this adjustment is made; if the contact springs are bent too far they may break or be damaged.

CHAPTER 4

FUNCTIONING AND TROUBLESHOOTING

Section I. FUNCTIONING

4-1. Circuit Switching (fig. 4-1)


Circuit switching is done between voltmeter M1 ranges and load resistors R1 through R26 by the use of selector plug P1 and 82 jacks (J1 through J82). The cord of the positive test prod is internally connected to the tip and the ring of selector plug P1. By insertion of selector plug P1 into any one of the 82 jacks, the positive terminal of the dry battery being tested is connected, first to one side of a load resistor, and then to one of the junctions between series-connected, voltmeter

shunt resistors R27 through R30. The other side of the load resistor is connected to a line common to one side of all load resistors. The common line is connected through the NO LOAD TEST LOAD switch to the negative prod. When the negative prod is applied to the negative terminal of the dry battery being tested, the circuit is completed.

4-2. Internal Differences

Internal differences are given in the chart below.

Item	TS-188/U	TS-188A/U	TS-188B/U
Load resistors R1 through R26.	Sealed in an oil-filled container.	Mounted on angle brackets on the underside of the front panel.	Mounted on angle brackets on the underside of the front panel.
Voltmeter multiplier resistors R27 through R30.	Mounted external to voltmeter.	Internally mounted in hermetically sealed voltmeter.	Internally mounted in hermetically sealed voltmeter.

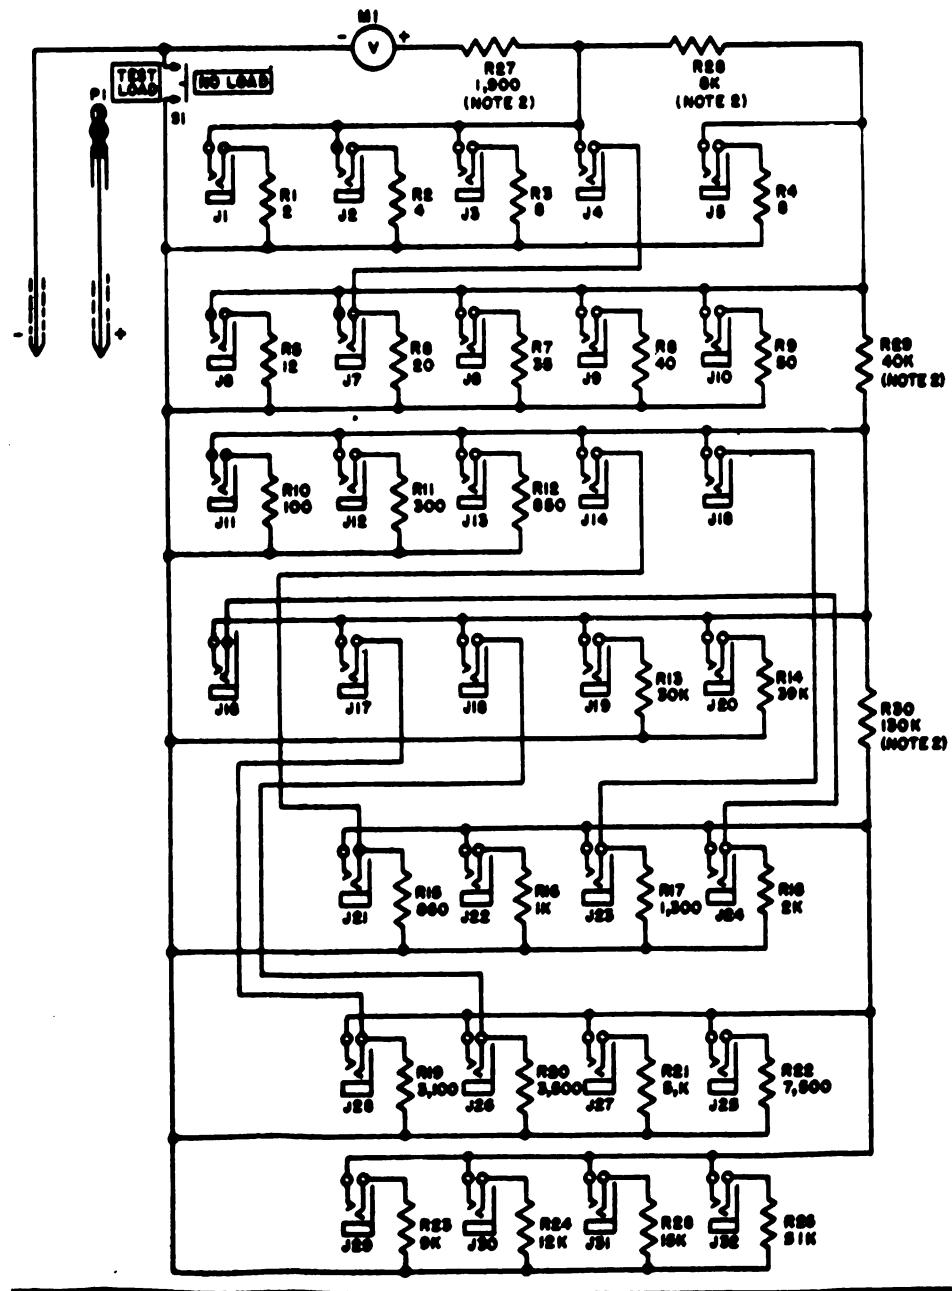

NOTES:

1. RESISTANCES ARE IN OHMS, R1 THRU R13 ARE 1% RESISTORS,
R14 THRU R28 ARE 5% RESISTORS.
2. R87 THRU R90 ARE VOLTMETER MULIPLIER RESISTORS THAT
ARE EXTERNALLY MOUNTED FOR TS-103/U AND INTERNALLY
MOUNTED FOR TS-103A/U AND TS-103B/U.

TM2871-11

Figure 4-1. Battery Testors TS-103/U, TS-103A/U, and TS-103B/U, schematic diagram.

Section II. TROUBLESHOOTING

4-3. General Instructions

Examine the load resistors, connectors, soldered connections, and the voltmeter for defects before setting up the test equipment. If the battery tester operator's complaint is available, study it for possible clues to causes of trouble.

4-4. Organization of Troubleshooting Procedures

a. *General.* The first step in servicing a defective battery tester is to localize the fault. Localization means tracing the fault to a defective stage or circuit responsible for the abnormal condition. The second step is isolation. Isolation means locating a defective part or parts.

b. *Localization and Isolation.* The first step in tracing trouble is to localize the defective stage or circuit by one of the following methods:

- (1) *Visual inspection.* The purpose of visual inspection is to locate faults without testing or measuring circuits. All meter indications or other visual signs should be observed, and an attempt made to localize the fault to a particular part.
- (2) *Resistance measurements.* Use the resistance values given in the schematic diagram (fig. 4-1) and compare them with readings taken.
- (3) *Operational tests.* Operational tests frequently indicate the general location of trouble. In many instances, the test will help to determine the exact nature of the fault.
- (4) *Troubleshooting chart.* The troubleshooting chart (para 4-6c) lists symptoms of common troubles and

gives (or references) corrective measures. Such a chart obviously cannot include all trouble symptoms that may occur. The repairman should use this chart as a guide to analyze symptoms that may not be listed.

- (5) *Resistor color code diagram.* The color code diagram for resistors (fig. 7-1) provides pertinent resistance, voltage rating, and tolerance information.

4-5. Test Equipment Required

Multimeter TS-852B/U is required for troubleshooting, and is used for continuity tests and resistance measurements.

4-6. Localizing Troubles

a. *General.* Procedures for localizing and isolating troubles within the various circuits of the battery tester are given in the troubleshooting chart (c below). Refer to figures 4-2, 4-3, and 4-4 for component locations. Refer to the schematic diagram (fig. 4-1) to identify circuit components. Refer to wiring diagrams (fig. 7-2, 7-3, and 7-4) for point-to-point circuit wiring and connections. Depending on the nature of the operational symptoms, one or more of the localizing procedures will be necessary. When trouble has been localized to a particular circuit, use resistance measurements to isolate the trouble to a particular part.

b. *Use of Chart.* If previous operational checks have resulted in reference to a particular item of this chart, go directly to the referenced item. If no operational symptoms are known, proceed with an operational check until a trouble symptom appears.

c. Troubleshooting Chart.

Item No.	Trouble symptom	Probable trouble	Check and corrective measure
1	Voltmeter fails to operate for all plug positions.	a. Broken or loose connection to tip of plug.	a. Check and correct connections.

Item No.	Trouble symptom	Probable trouble	Check and corrective measure
2	Voltmeter fails to operate for one or more plug positions.	a. Defective voltmeter b. Weak jack contact spring c. Broken connection to jack -	a. Replace voltmeter. b. Adjust contact spring (para 8-11). c. Check and repair defective connection.
3	All load resistors have no loading effect.	a. Broken or loose connection to ring of selector plug. b. Defective switch c. Broken or loose connection to switch.	a. Check connection to selector plug. b. Replace switch. c. Check connections to switch.
4	One load resistor has no loading effect.	a. Weak jack contact spring b. Broken connection to jack - c. Defective load resistor -----	a. Adjust contact spring (para 8-11). b. Check connection. c. Replace resistor.



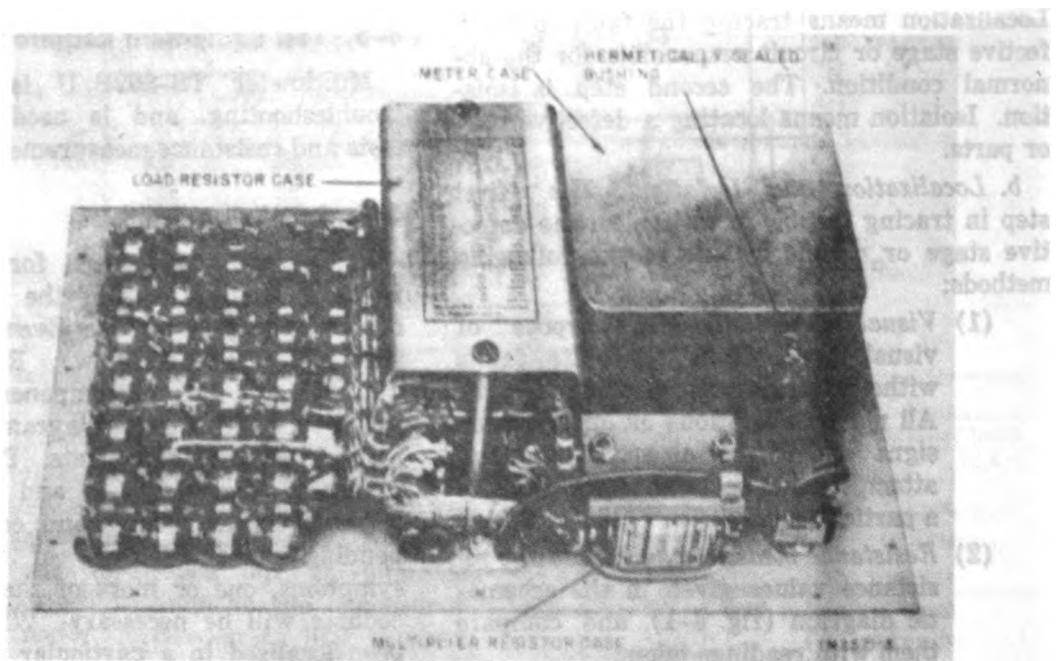


Figure 4-8. Battery Tester TS-183/U, parts location.

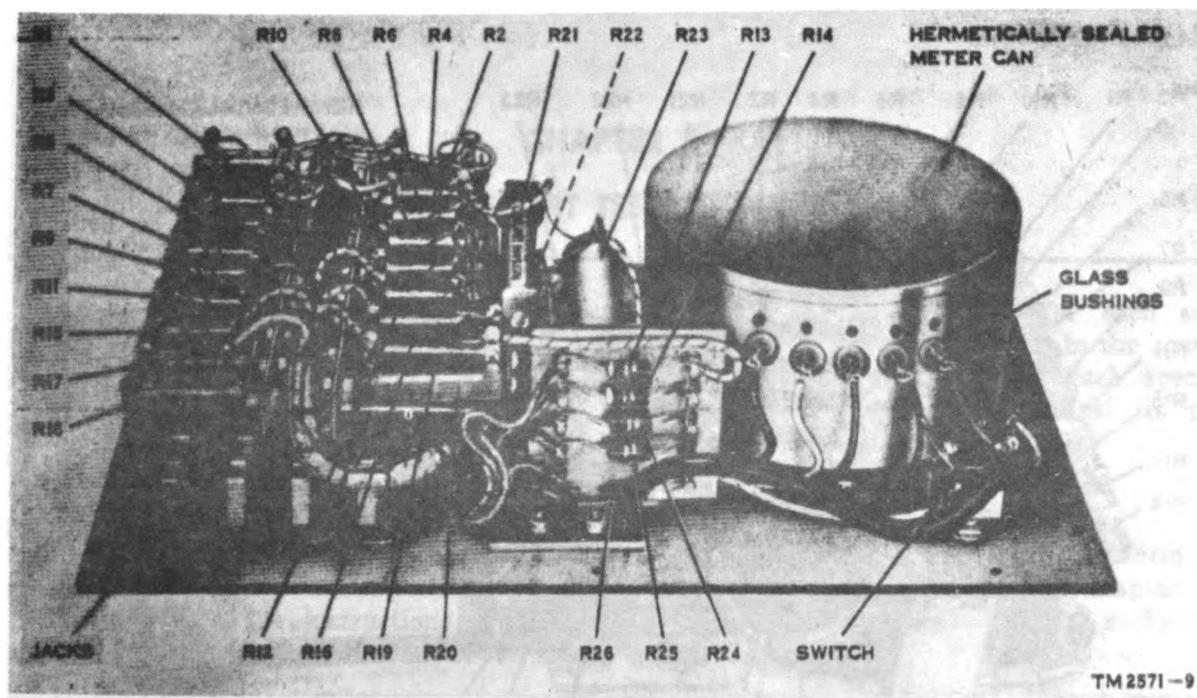

TM 2571-9

Figure 4-8. Battery Tester TS-129A/U, parts location.

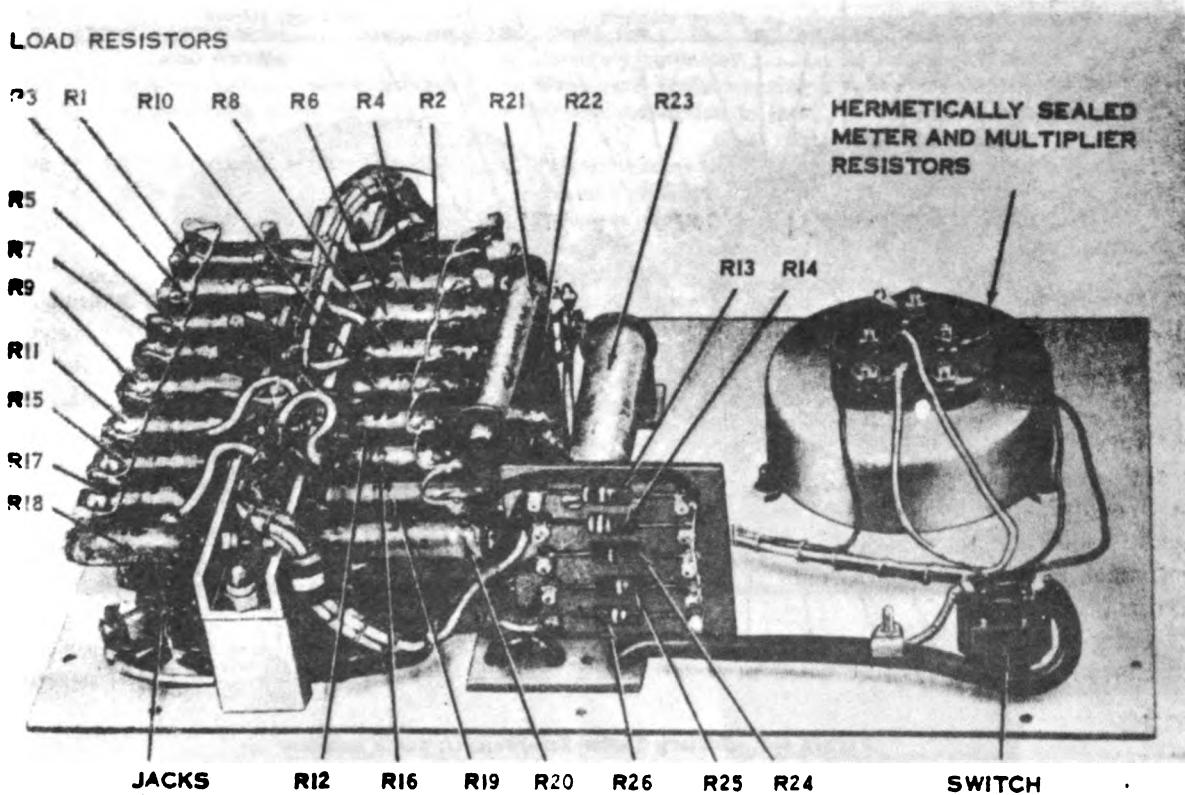

TM2571-10

Figure 4-6. Battery Tester TS-188B/U, parts location.

CHAPTER 5

GENERAL SUPPORT TESTING PROCEDURES

5-1. General

a. Testing procedures are prepared for use by Electronics Field Maintenance Shops and Electronics Service Organizations responsible for the general support maintenance of repaired equipment. These procedures set forth specific requirements that repaired equipment must meet before it is returned to the using organization.

b. Comply with the instructions preceding each chart before proceeding to the chart. Per-

form each step in sequence. For each step, perform all the actions required in the *control settings* column; then perform each specific test procedure and verify it against its performance standard.

5-2. Test Equipment

All test equipment required to perform the testing procedures given in this chapter are listed in the chart below, and are authorized under TA 11-17.

Item description	Federal stock No.	Technical manual
Meter, Test Set TS-662A/GSM-1.	6625-669-0747	TM 11-2595B
Resistance Bridge ZM-4A/U.	6625-570-5722	TM 11-3019

5-3. Physical Tests and Inspection**a. Test Equipment and Materials.** None.**b. Test Connections and Conditions.**


(1) No connections necessary.

(2) Remove the front panel from the case.

c. Procedures.

Seq. No.	Control setting	Test procedure		Performance standard
		Initial reading	Intermediate reading	
1	N/A	N/A		<p>a. Inspect the front panel, chassis, and case for damage, missing parts, and condition of paint. Note. Touchup painting is recommended instead of refinishing whenever practical; screwheads, binding posts, receptacles, and other plated parts will not be painted or polished with abrasives.</p> <p>b. Inspect mechanical assemblies for loose or missing screws, bolts, and nuts.</p> <p>c. Inspect all test probe, connectors, sockets, jacks, and voltmeter for looseness, damage, or missing parts.</p>
2	N/A	N/A		Operate switch.

Switch will operate properly.

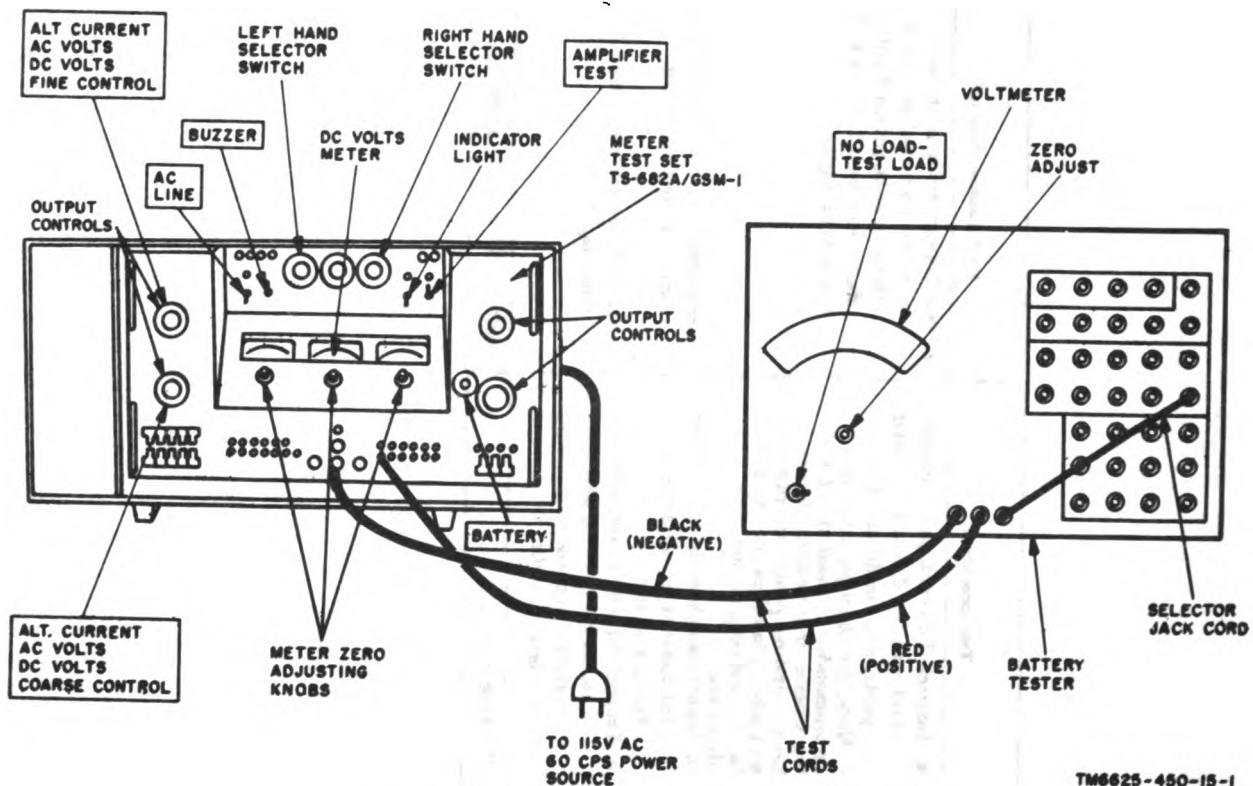

TM6625-450-15-1

Figure 5-1. Voltmeter, test connection diagram.

5-4. Voltmeter Test

a. **Test Equipment.** Meter, Test Set TS-682A/GSM-1.

b. **Test Connections and Conditions.** Connect the equipment as shown in figure 5-1 with the black (negative) test prod of the battery tester connected to the common jack of TS-682A/GSM-1. Instructions to connect the red (positive) test prod of the battery tester are given in c below. For each test given in c below, be sure that the NO LOAD-TEST LOAD switch of the battery tester is set to NO LOAD.

c. Procedures.

Step No.	Test equipment	Control settings	Equipment under test	Test procedure	Performance standard
1	TS-682A/GSM-1: AC LINE: OFF. Range (S4): DCV. Range (S5): 100 MVDC to 400 VDC. Range (S6): (Any position). Set DC VOLTS COARSE and FINE CONTROLS fully counterclockwise. BATTERY: OFF. Set AC LINE switch to ON, and allow 15 minutes for warmup.	Selector plug connected to jack No. 1. NO LOAD-TEST LOAD switch to NO LOAD.	Equipment plug connected to jack No. 1. NO LOAD-TEST LOAD switch to NO LOAD.	a. Connect red (positive) test prod of battery tester to 2V jack on TS-682A/GSM-1 and adjust DC VOLTS COARSE and FINE CONTROLS for an indication of 1 volt on TS-682A/GSM-1. b. Adjust DC VOLTS COARSE and FINE CONTROLS for an indication of 1.8 volts on TS-682A/GSM-1. c. Set DC VOLTS COARSE and FINE CONTROLS fully clockwise. d. Connect red (positive) test prod of battery tester to 10V jack on TS-682A/GSM-1, selector plug to jack No. 5 of battery tester, and adjust DC VOLTS COARSE and FINE CONTROLS for an indication of 5 volts on TS-682A/GSM-1. e. Adjust DC VOLTS COARSE and FINE CONTROLS for an indication of 9 volts on TS-682A/GSM-1. f. Set DC VOLTS COARSE and FINE CONTROLS fully counterclockwise. g. Connect red (positive) test prod of battery tester to 40V jack on TS-682A/GSM-1, selector plug to jack No. 11 of battery tester, and adjust DC VOLTS COARSE and FINE CONTROLS for an indication of 24.5 and 25.5 volts.	a. Battery tester voltmeter indicates between 0.98 and 1.02 volts. b. Battery tester voltmeter indicates between 1.76 and 1.84 volts. c. None. d. Battery tester voltmeter indicates between 4.9 and 5.1 volts. e. Battery tester voltmeter indicates between 8.8 and 9.2 volts. f. None. g. Battery tester voltmeter indicates between 24.5 and 25.5 volts.

	MULTIPLY BY: <u>1000.</u> 1000 dial: 8. 100 dial: 0. 10 dial: 0. 1 dial: 0.	Same as step 1.	Connect selector plug to Jack No. 6, and adjust the dials of ZM-4A/U to measure the resistance at Jack No. 6.
6	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: <u>1</u> 1000 dial: 1. 100 dial: 2. 10 dial: 0. 1 dial: 0.	Same as step 1.	Resistance indicated at Jack No. 6 is between 11.9 and 12.8 ohms.
7	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: <u>1</u> 1000 dial: 2. 100 dial: 0. 10 dial: 0. 1 dial: 0.	Same as step 1.	Connect selector plug to Jack No. 7, and adjust the dials of ZM-4A/U to measure the resistance at Jack No. 7.
8	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: <u>1</u> 1000 dial: 3. 100 dial: 5. 10 dial: 0. 1 dial: 0.	Same as step 1.	Connect selector plug to Jack No. 8, and adjust the dials of ZM-4A/U to measure the resistance at Jack No. 8.
9	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: <u>1</u> 1000 dial: 4. 100 dial: 0. 10 dial: 0. 1 dial: 0.	Same as step 1.	Connect selector plug to Jack No. 9, and adjust the dials of ZM-4A/U to measure the resistance at Jack No. 9.
10	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: <u>1</u> 1000 dial: 5. 100 dial: 0. 10 dial: 0. 1 dial: 0.	Same as step 1.	Connect selector plug to Jack No. 10, and adjust the dials of ZM-4A/U to measure the resistance at Jack No. 10.

28	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: $\frac{1}{1}$. 1000 dial: 7. 100 dial: 2. 10 dial: 3. 1 dial: 0.	Same as step 1. Connect selector plug to jack No. 22, and adjust the dials of ZM-4A/U to measure the resistance at jack No. 22.	Resistance indicated at jack No. 22 is between 6,968 and 7,002 ohms.
29	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: $\frac{1}{1}$. 1000 dial: 6. 100 dial: 6. 10 dial: 4. 1 dial: 8.	Same as step 1. Connect selector plug to jack No. 22, and adjust the dials of ZM-4A/U to measure the resistance at jack No. 22.	Resistance indicated at jack No. 22 is between 6,216 and 9,061 ohms.
30	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: $\frac{1}{10}$. 1000 dial: 1. 100 dial: 1. 10 dial: 3. 1 dial: 2.	Same as step 1. Connect selector plug to jack No. 20, and adjust the dials of ZM-4A/U to measure the resistance at jack No. 20.	Resistance indicated at jack No. 20 is between 10,764 and 11,898 ohms.
31	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: $\frac{1}{10}$. 1000 dial: 1. 100 dial: 8. 10 dial: 9. 1 dial: 6.	Same as step 1. Connect selector plug to jack No. 31, and adjust the dials of ZM-4A/U to measure the resistance at jack No. 31.	Resistance indicated at jack No. 31 is between 13,295 and 14,695 ohms.
32	ZM-4A/U: GA: R.V.M. RES-VAR-MUR: RES. MULTIPLY BY: $\frac{1}{100}$. 1000 dial: 1. 100 dial: 8. 10 dial: 9. 1 dial: 6.	Same as step 1. a. Connect selector plug to jack No. 32, and adjust the dials of ZM-4A/U to measure the resistance at jack No. 32. b. Disconnect the equipment.	a. Resistance indicated at jack No. 32 is between 38,000 and 42,000 ohms. b. None.

5-6. Test Data Summary

A summary of the test data is given below:

1. VOLTMETER:	<i>TEST data performance standard</i>
a. 0- to 2-volt range:	
(1) 1-volt standard -----	Between 0.98 and 1.02 volts.
(2) 1.8-volt standard -----	Between 1.76 and 1.84 volts.
b. 0- to 10-volt range:	
(1) 5-volt standard -----	Between 4.9 and 5.1 volts.
(2) 9-volt standard -----	Between 8.8 and 9.2 volts.
c. 0- to 50-volt range:	
(1) 25-volt standard -----	Between 24.5 and 25.5 volts.
(2) 45-volt standard -----	Between 44.1 and 45.9 volts.
d. 0- to 200-volt range:	
(1) 100-volt standard -----	Between 98 and 102 volts.
(2) 180-volt standard -----	Between 176 and 184 volts.
2. RESISTANCE OF JACKS J1-J32:	
J1 -----	Between 1.98 and 2.09 ohms
J2 -----	Between 3.95 and 4.1 ohms.
J3 -----	Between 5.92 and 6.09 ohms.
J4 -----	Between 19.3 and 20.1 ohms.
J5 -----	Between 7.85 and 8.1 ohms.
J6 -----	Between 11.8 and 12.8 ohms.
J7 -----	Between 19.4 and 20.2 ohms.
J8 -----	Between 34.4 and 35.4 ohms.
J9 -----	Between 39.4 and 40.3 ohms.
J10 -----	Between 49.1 and 50.3 ohms.
J11 -----	Between 98.5 and 101 ohms.
J12 -----	Between 295.2 and 301.5 ohms.
J13 -----	Between 538 and 550 ohms.
J14 -----	Between 802 and 889 ohms.
J15 -----	Between 1,203 and 1,331 ohms.
J16 -----	Between 1,826 and 2,020 ohms.
J17 -----	Between 2,773 and 3,065 ohms.
J18 -----	Between 3,107 and 3,435 ohms.
J19 -----	Between 17,812 and 19,688 ohms.
J20 -----	Between 21,109 and 23,331 ohms.
J21 -----	Between 813 and 899 ohms.
J22 -----	Between 945 and 1,045 ohms.
J23 -----	Between 1,227 and 1,357 ohms.
J24 -----	Between 1,881 and 2,079 ohms.
J25 -----	Between 2,900 and 3,206 ohms.
J26 -----	Between 3,278 and 3,612 ohms.
J27 -----	Between 4,635 and 5,123 ohms.
J28 -----	Between 6,968 and 7,592 ohms.
J29 -----	Between 8,215 and 9,081 ohms.
J30 -----	Between 10,754 and 11,886 ohms.
J31 -----	Between 18,295 and 14,695 ohms.
J32 -----	Between 38,000 and 42,000 ohms.

CHAPTER 6

DEPOT OVERHAUL STANDARDS

6-1. Applicability of Depot Overhaul Standards

The tests outlined in this chapter are designed to measure the performance capability of a repaired equipment. Equipment that is to be returned to stock should meet the standards given in these tests.

6-2. Applicable References

a. **Repair Standards.** Applicable procedures of the depots which perform these tests and the general standards for repaired electronic equipment given in TB SIG 855-1, TB SIG 855-2, and TB SIG 855-3 form a part of the requirements for testing this equipment.

b. **Modification Work Orders.** Perform all modification work orders applicable to this equipment before making the tests specified. DA Pam 810-4 lists all available MWO's.

6-3. Test Facilities Required

Items required for depot testing are as follows:

Manufacturer	Technical manual	Common name
Meter, Test Set TB-692A/ GSM-1.	TM 11-8685B	Test set.
Resistance Bridge ZM-4A/U.	TM 11-8010	Resistance bridge.

6-4. Tests

The depot inspection standards test procedures are the same as those for general support (para 5-4 and 5-5). Equipment that meets the performance standards stated in these tests will furnish satisfactory operation equivalent to that of new equipment.

CHAPTER 7

SHIPMENT, LIMITED STORAGE, AND DEMOLITION TO PREVENT ENEMY USE

7-1. Repacking for Shipment and Limited Storage

a. The original packing materials may be used to repack the battery tester. Repack the equipment as shown in figure 2-1.

b. Pack the battery tester securely to prevent damage during transit or limited storage. Use sufficient wadding. Protect the equipment from rain and snow.

7-2. Authority for Demolition

The demolition procedures given in paragraph 7-3 will be used to prevent the enemy from using or salvaging this equipment. Demolition of the equipment will be accomplished only upon the order of the commander.

7-3. Methods of Destruction

The tactical situation and time available will determine the method to be used when de-

struction of equipment is ordered. In most cases, it is preferable to completely demolish some portions of the equipment rather than partially destroy all the equipment components.

a. *Smash.* Smash the case, the meter, and the control. Smash the internal components.

b. *Cut.* Cut the wiring of the battery tester.


Warning: Be extremely careful with explosives and incendiary devices. Use these items only when the need is urgent.

c. *Burn.* Burn the technical manuals first. Burn as much of the equipment as is flammable.

d. *Disposal.* Bury or scatter destroyed parts.


COLOR CODE MARKING FOR MILITARY STANDARD RESISTORS

COMPOSITION-TYPE RESISTORS

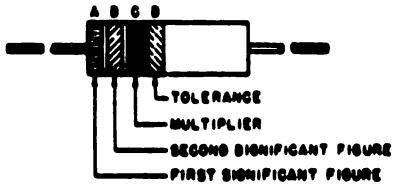

BAND A—Equal Width Band
Signifies Composition-Type

WIREWOUND-TYPE RESISTORS

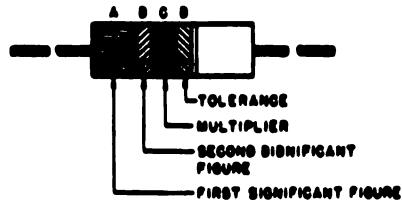


BAND A—Double Width Signifies
Wire-wound Resistor

COLOR CODE TABLE

BAND A		BAND B		BAND C		BAND D°	
COLOR	FIRST SIGNIFICANT FIGURE	COLOR	SECOND SIGNIFICANT FIGURE	COLOR	MULTIPLIER	COLOR	RESISTANCE TOLERANCE (PERCENT)
BLACK	0	BLACK	0	BLACK	1		
BROWN	1	BROWN	1	BROWN	10		
RED	2	RED	2	RED	100		
ORANGE	3	ORANGE	3	ORANGE	1,000		
YELLOW	4	YELLOW	4	YELLOW	10,000	SILVER	± 10
GREEN	5	GREEN	5	GREEN	100,000	GOLD	± 5
BLUE	6	BLUE	6	BLUE	1,000,000		
PURPLE (VIOLET)	7	PURPLE (VIOLET)	7				
GRAY	8	GRAY	8	SILVER	0.01		
WHITE	9	WHITE	9	GOLD	0.1		

EXAMPLES OF COLOR CODING


BAND

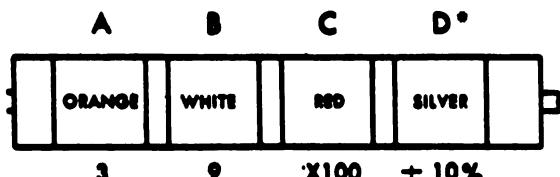

NOMINAL RESISTANCE 3,900 Ohms

RESISTANCE TOLERANCE ± 10 percent

BAND

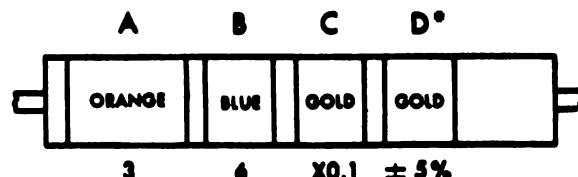

NOMINAL RESISTANCE 3.6 Ohms

RESISTANCE TOLERANCE ± 5 percent

*If Band D is omitted, the resistor tolerance is $\pm 20\%$, and the resistor is not MIL-Std.

STD-R2

Figure 7-1. MIL-STD resistor color code markings.

APPENDIX A

REFERENCES

-
- | | |
|---------------------|--|
| AR 700-58 | Report of Damaged or Improper Shipment. |
| DA Pam 810-4 | Index of Technical Manuals, Technical Bulletins, Supply Manuals (types 7, 8, and 9), Supply Bulletins, Lubrication Orders, and Modification Work Orders. |
| SB 11-6 | Dry Battery Supply Data. |
| TA 11-17 | Army Field Maintenance Shops. |
| TB 11-6625-450-10/1 | Test Data for Battery Testers TS-183/U, TS-183A/U, and TS-183B/U. |
| TB SIG 855-1 | Depot Inspection Standard for Repaired Signal Equipment. |
| TB SIG 855-2 | Depot Inspection Standard for Refinishing Repaired Signal Equipment. |
| TB SIG 855-3 | Depot Inspection Standard for Moisture and Fungus Resistant Treatment. |
| TB SIG 864 | Field Instructions for Painting and Preserving Electronics Command Equipment. |
| TM 11-2019 | Tests Sets I-49, I-49-A and I-49-B and Resistance Bridges ZM-4A/U and ZM-4B/U. |
| TM 11-2535B | Meter Test Set TS-682A/GSM-1. |
| TM 11-5102 | Resistors, Decade ZM-16/U, ZM-16A/U, and ZM-16B/U. |
| TM 11-6625-203-12 | Operator and Organizational Maintenance Manual, Multimeter AN/URM-105, Including Multimeter ME-77/U. |
| TM 11-6625-366-15 | Organizational, DS, GS, and Depot Maintenance Manual, Multimeter TS-352B/U. |
| TM 88-750 | Army Equipment Record Procedures. |

APPENDIX C

MAINTENANCE ALLOCATION

Section I. INTRODUCTION

C-1. General

This appendix provides a summary of the maintenance operations covered in the equipment literature for Battery Testers TS-188/U, TS-188A/U, and TS-188B/U. It authorized categories of maintenance for specific maintenance functions on repairable items and components and the tools and equipment required to perform each function. This appendix may be used as an aid in planning maintenance operations.

C-2. Explanation of Format for Maintenance Allocation Chart

a. *Group Number.* Not used.

b. *Component Assembly Nomenclature.* This column lists the item names of component units, assemblies, subassemblies, and modules on which maintenance is authorized.

c. *Maintenance Function.* This column indicates the maintenance category at which performance of the specific maintenance function is authorized. Authorization to perform a function at any category also includes authorization to perform that function at higher categories. The codes used represent the various maintenance categories as follows:

Code	Maintenance category
C	Operator/crew
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

d. *Tools and Equipment.* The numbers appearing in this column refer to specific tools and equipment which are identified by these numbers in section III.

e. *Remarks.* Self explanatory.

C-3. Explanation of Format for Tool and Test Equipment Requirements

The columns in the tool and test equipment requirements chart are as follows:

a. *Tools and Equipment.* The numbers in this column coincide with the numbers used in the tools and equipment column of the MAC. The numbers indicate the applicable tool for the maintenance function.

b. *Maintenance Category.* The codes in this column indicate the maintenance category normally allocated the facility.

c. *Nomenclature.* This column lists tools, test, and maintenance equipment required to perform the maintenance functions.

d. *Federal Stock Number.* This column lists the Federal stock number.

e. *Tool Number.* Not used.

MAINTENANCE ALLOCATION CHART

GROUP NUMBER	COMPONENT ASSEMBLY NOMENCLATURE	MAINTENANCE FUNCTIONS											
		INSPECT	TEST	SERVICE	ADJUST	ALIGN	CALIBRATE	INSTALL	REPLACE	REPAIR	OVERHAUL	REBUILD	REMARKS
	BATTERY TESTER TS-183A/U AND TS-183B/U*	C	C	C	O	O	O	H	5	5	5	5	Inspects for defects and general appearance. Cleans exterior Adjustment to "0" Performs operational test Inspects for loose connections, cracked and worn insulation and load resistors for signs of over heating Cleans interior Troubleshooting and comprehensive testing Adjust jack springs Repairs by replacing easily removable parts Test for performance after repairing Repair as required

*Battery Tester TS-U will not be maintained, replace as a complete unit.

C-4

SECTION III. TOOL AND TEST EQUIPMENT REQUIREMENTS

TOOL AND TEST EQUIPMENT REQUIREMENTS	MATERIALS NOMENCLATURE	FEDERAL STOCK NUMBER	TOOL NUMBER
TOOLS AND EQUIPMENT	Maintenance Category		
1	0	6625-921-2036	
2	H,D	6625-242-5023	
3	H,D	6625-500-0937	
4	H,D	6625-669-0747	
5	Q,H,D	5100-420-0177	

APPENDIX D

ORGANIZATIONAL, DS, GS, AND DEPOT MAINTENANCE REPAIR PARTS

Section I. INTRODUCTION

D-1. General

This appendix contains a list of repair parts required for the performance of organizational maintenance and a list covering the corresponding requirements for general support, and depot maintenance for Battery Testers TS-183/U, TS-183A/U and TS-183B/U.

Note. No special tools, test, and support equipment are required.

D-2. Explanation of Sections

This repair parts list is divided into three principal parts:

a. *Repair Parts for Organizational Maintenance, Section II.* Repair parts authorized for organizational maintenance is included in this section.

b. *Repair Parts, DS, GS, and Depot Maintenance, Section III.* This chart lists repair parts authorized for maintenance performance at general support and depot categories. No parts authorized for stockage at direct support.

c. *Federal Stock Number Index, Section IV.* This is a cross-reference index of Federal stock numbers to illustrations by figure and item number.

D-3. Explanation of Columns

An explanation of the columns in sections II and III is given below.

a. Source, Maintenance, and Recoverability Codes, Column 1, Sections II and III.

(1) *Source code, column 1a.* The selection status and source for the listed item is noted here. The source code and its explanation are as follows:

Code	Explanation
P	applies to repair parts that are stocked in or supplied from GSA/DSA, or Army supply system, and authorized for use at indicated maintenance categories.
(2)	<i>Maintenance code, column 1b.</i> The lowest category of maintenance authorized to install the listed item is noted here.

Code	Explanation
O	Organizational maintenance
H	General support maintenance
(3)	<i>Recoverability code, column 1c.</i> Not used.

Note. When no code is indicated in the recoverability column, the part will be considered expendable.

b. *Federal Stock Number, Column 2, Sections II and III.* The Federal stock number for the item is indicated in this column.

c. *Description, Column 3, Sections II and III.* The model designator, Federal item name, and a part number are included in this column. The designator (*) indicates the different models of the end equipment. The indenture code column is not used.

d. *Unit of Issue, Column 4, Sections II and III.* The unit used as a basis of issue (e.g. ea, pr, ft, yd, etc) is noted in this column.

e. *Quantity Incorporated in Unit Pack, Column 5, Sections II and III.* Not used.

f. *Quantity Incorporated in Unit, Column 6, Sections II and III.* The quantity of repair parts in an assembly is given in this column.

g. Maintenance Allowance, Column 7, Sections II and III.

- (1) The allowance columns are divided into subcolumns. The total quantity of items authorized for the number of equipments supported is indicated in each subcolumn opposite the first appearance of each item. Items authorized for use as required but not for initial stockage are identified with an asterisk (*) in the allowance column.
- (2) Subsequent changes to organizational allowances will be limited as follows: No change in the range of items is authorized. If additional items are considered necessary, recommendation should be forwarded to Commanding General, U. S. Army Electronics Command, ATTN: AMSEL-MN-NMP-TB, Fort Monmouth, N. J., 07703, for exception or revision to the allowance list. Revisions to the range of items authorized will be made by the USA ECOM National Maintenance Point based upon engineering experience, demand data, on TAERS information.
- (3) The quantitative allowances for GS category of maintenance will represent initial stockage for a 30-day period for the number of equipments supported.

h. One-Year Allowances Per 100 Equipments/Contingency Planning Purposes, Column 8, Section III. Opposite the first appearance of each item, the total quantity required for distribution and contingency planning purposes is indicated. The range of items indicates total quantities of all authorized items required to provide for adequate support of 100 equipments for 1 year.

i. Illustration, Column 8, Section II and Column 10, Section III.

- (1) *Figure number, column 8a and 10a.* The number of the illustration in which the item is shown, is indicated in this column.
- (2) *Item or symbol number, column 8b and 10b.* The callout number used to reference the item in the illustration is indicated in this column.

j. Depot Maintenance Allowance Per 100 Equipments, Column 9, Section III. This column indicates the total quantity of each item authorized depot maintenance for 100 equipments.

D-4. Location of Repair Parts

a. When the Federal stock number is unknown, follow the procedures given in (1) through (4) below.

- (1) Use the table of contents to locate the appropriate appendix of the repair parts list.
- (2) If the item or symbol number is available, locate the item by scrutiny of column 8b and 10b of the repair parts list.
- (3) If the item, symbol, and figure number is not known, check the description column (column 8) in the repair parts list to locate the part.
- (4) Locate the applicable illustration in this manual and note the figure number and item number. Use the repair parts listing and locate the figure number and item number as noted on the illustration.

b. When the Federal stock number is known, use the repair part listing to find the part and the figure and item number as noted in the Federal stock number index.

卷之三

SECTION III. *THEIR MAMMALS, ETC., AND THEIR HABITS*

(1) SOURCE CDS	(2) FEDERAL STOCK NUMBER	(3) MODEL	REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT AND DEPOT MAINTENANCE						(5) QTY INC UN PK	(6) QTY INC UN PK	(7) 30 DAY MAINT. ALW.	(8) UNIT OF ISSUE	(9) ALW. PER 100 EQUIP.	CNTGTY PLAT.	DEPOT MANT.	(10) ILLUSTRATIONS	
			1	2	3	4	5	6									
P	5905-192-5000	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	11
P	5905-264-8762	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	12
P	5905-263-2633	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	13
P	5905-298-0013	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	14
P	5905-173-8764	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	15
P	5905-199-0059	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	16
P	5905-199-5318	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	17
P	5905-264-8765	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	18
P	5905-602-1206	*	*	*	*	*	*	*	1	1	1	1	1	1	1	1	19

(continued)
RS-183/U, 183A/U, 183B/U

RESISTOR, FIXED, WIREBOUND:
2 ohm ±1%; 10 w; MIL type
MILSPEC

RESISTOR, FIXED, WIREBOUND:
4 ohm ±1%; 10 w; MIL type
MILSPEC

RESISTOR, FIXED, WIREBOUND:
6 ohm ±1%; 10 w; MIL type
MIL type MILV1632

RESISTOR, FIXED, WIREBOUND:
8 ohm ±1%; 10 w; MIL type
MILSPEC

RESISTOR, FIXED, WIREBOUND:
12 ohm ±1%; 10 w; MIL type
MILSPEC

RESISTOR, FIXED, WIREBOUND:
20 ohm ±1%; 10 w; MIL type
MILSPEC

RESISTOR, FIXED, WIREBOUND:
35 ohm ±1%; 10 w; MIL type
MILSPEC

RESISTOR, FIXED, WIREBOUND:
40 ohm ±1%; 10 w

RESISTOR, FIXED, WIREBOUND:
50 ohm ±1%; 10 w; MIL type
MILSPEC

(b) REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE	(c) DESCRIPTION	(d) MODEL	UNIT OF ISSUE						(e) UNIT OF ISSUE	(f) CITY INC IN IN IN IN IN	(g) CITY INC INC INC INC INC INC	(h) 30 DAY MAINT. ALW.	(i) I.V.R. ALW.	PER 100 EQUIP. (j)	CNTGTY PL	DEPOT MATER. (k)	ALW. PER (l)	100 EQUIP. (m)	100 EQUIP. (n)	100 EQUIP. (o)	100 EQUIP. (p)	100 EQUIP. (q)	100 EQUIP. (r)	100 EQUIP. (s)	100 EQUIP. (t)	100 EQUIP. (u)	100 EQUIP. (v)	100 EQUIP. (w)	100 EQUIP. (x)	100 EQUIP. (y)	100 EQUIP. (z)	ITEM OR SYMBOL NUMBER	(n) ILLUSTRATIONS
			1	2	3	4	5	6																									
P	P	2902-157-0690	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	SI-100-3	GS				
P	P	2902-621-2033	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	21-50	GS				
P	P	2902-666-3776	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	1-20	GS				
P	P	2902-813-2020	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	21-50	GS				
P	P	2902-824-1971	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	1-20	GS				
P	P	2902-99-9012	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	21-50	GS				
P	P	2902-100-6793	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	1-20	GS				
P	P	2902-130-2073	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	21-50	GS				
P	P	2902-135-2713	*	*	*	*	*	*	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	1-20	GS				
P	P																																

REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE									
(1)	(2)	(3)	(4) UNIT OF ISSUE						
ITEM NO.	FEDERAL STOCK NUMBER	DESCRIPTION	QTY	IN	IN	IN	IN	IN	IN
P	5905-792-0026	RESISTOR, FIXED, VARIABLE: 5000 ohm ±2%; 18 v; MIL type ME33602	1	8	8	8	8	8	8
P	5905-188-5316	RESISTOR, FIXED, VARIABLE: 7500 ohm ±2%; 24 v; MIL type ME336702	1	8	8	8	8	8	8
P	5905-983-0057	RESISTOR, FIXED, VARIABLE: 9000 ohm ±2%; 30 v; MIL type ME336902	1	8	8	8	8	8	8
P	5905-299-2030	RESISTOR, FIXED, COMPOSITION: 12,000 ohm ±2%; 1 v; MIL type ME324F123J	1	8	8	8	8	8	8
P	5905-299-2036	RESISTOR, FIXED, COMPOSITION: 15,000 ohm ±2%; 1 v; MIL type ME324F153J	1	8	8	8	8	8	8
P	5905-299-2039	RESISTOR, FIXED, COMPOSITION: 30,000 ohm ±2%; 1 v; MIL type ME324F303J	1	8	8	8	8	8	8
P	5905-299-2047	RESISTOR, FIXED, COMPOSITION: 39,000 ohm ±2%; 1 v; MIL type ME324F39J	1	8	8	8	8	8	8
P	5905-120-0067	RESISTOR, FIXED, COMPOSITION: 51,000 ohm ±2%; 1 v; MIL type ME324F51J	1	8	8	8	8	8	8
P	5930-050-2671	SUSP., TORQUE: 60-228; 80%	1	8	8	8	8	8	8

SECTION IV. FEDERAL STOCK NUMBER INDEX

INDEX - FEDERAL STOCK NUMBER CROSS REFERENCE TO FIGURE AND ITEM NUMBER OR REFERENCE SYMBOL					
STOCK NO.	FIGURE NO.	ITEM NO. REF. SYMBOL	STOCK NO.	FIGURE NO.	ITEM NO. REF. SYMBOL
5905-100-6795	4-3 4-4	R18	5905-642-1972	4-3 4-4	R26
5905-120-0167	4-3 4-4	R26	5905-644-8033	4-3 4-4	R21
5905-157-0830	4-3 4-4	R10	5905-666-3776	4-3 4-4	R22
5905-173-8704	4-3 4-4	R5	5905-795-0424	4-3 4-4	R21
5905-188-5316	4-3 4-4	R22	5905-843-2030	4-3 4-4	R25
5905-188-5318	4-3 4-4	R7	5905-843-2633	4-3 4-4	R3
5905-191-9000	4-3 4-4	R1	5930-050-2631	4-3 4-4	R1
5905-191-9075	4-3 4-4	R19	5935-198-4729	1-3 1-4	J1 thru J38
5905-192-9042	4-3 4-4	R17	5935-192-4753	1-3 1-4	R1
5905-196-2713	4-3 4-4	R20	6625-255-5061	1-3 1-4	R1
5905-199-0068	4-3 4-4	R6	6625-892-9931	1-4	R1
5905-258-0013	4-3 4-4	R4			
5905-264-8702	4-3 4-4	R2			
5905-264-8702	4-3 4-4	R3			
5905-299-2015	4-3 4-4	R14			
5905-299-2017	4-3 4-4	R13			
5905-299-2026	4-3 4-4	R25			
5905-299-2030	4-3 4-4	R24			
5905-583-8157	4-3 4-4	R23			
5905-642-1206	4-3 4-4	R9			

By Order of the Secretary of the Army:

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

Distribution:

Active Army:

CNGB (1)
 CC-E (7)
 Dir of Trans (1)
 CofEngrs (1)
 TSG (1)
 CofSptS (1)
 USAARENBD (3)
 USAAESWBD (5)
 USA Arty Bd (3)
 USACDCEA (1)
 USACDCCBRA (1)
 USACDCCEA (1)
 USACDCCEA
 (Ft Huachuca) (1)
 USACDCOA (1)
 USACDCQMA (1)
 USACDCTA (1)
 USACDCADA (1)
 USACDCARMA (1)
 USACDCAVNA (1)
 USACDCARTYA (1)
 USACDCSWA (1)
 USCONARC (5)
 USAMC (6)
 USASA (2)
 USAMICOM (4)
 USASTRATCOM (4)
 USASTRATCOM-
 CONUS (5)
 USAESC (70)
 USACDCEC (10)
 USAINTC (5)
 ARADCOM (5)
 ARADCOM Rgn (2)
 OS Maj Cmd (4) except
 USARHAW (5)
 USARJ (5)
 USARYIS (5)
 LOGCOMD (2)
 MDW (1)
 Armies (3) except
 Eighth US Army (5)
 Corps (2)
 USAC (3)
 52nd USASA Sp Op Cmd (5)

NG: State AG (3).

USAR: None.

For explanation of abbreviations used, see AR 330-50.

HAROLD K. JOHNSON,
General, United States Army,
Chief of Staff.

507th USASA Gp (5)	UMAD (8)
508th USASA Gp (5)	Gen Dep (2)
818th USASA Bn (5)	Sig Sec, Gen Dep (5)
819th USASA Bn (5)	Sig Dep (12)
75th USASA Co (5)	USATC Armor (2)
177th USASA Co (5)	USATC Engr (2)
182nd USASA Co (5)	USATC Inf (2)
183rd USASA Co (5)	USASTC (2)
184th USASA Co (5)	WRAMC (1)
Svc Colleges (2)	Army Pic Cen (2)
USMA (30)	USAECFB (5)
AFIP (15)	USAMEDTC (5)
USASCS (15)	USAEPG (5)
USASESCS (20)	APG (5)
USAADS (30)	Edgewood Arsenal (5)
USAAMS (30)	Redstone Arsenal (5)
USAARMS (20)	USAARMHRU (5)
USAIS (20)	USAINFOHRU (5)
USAES (2)	USAADVNRHU (5)
USAADVNS (20)	LGH (5)
MFSS (20)	Sig FLDMS (2)
USATSCH (20)	AMS (1)
USACMLCS (15)	USAERDAA (2)
Instl (2) except	USAERDAW (12)
Ft Hancock (4)	USACRREL (2)
Ft Gordon (10)	MM Sig Spt Fac (5)
Ft Huachuca (10)	Units org under fol TOE:
Ft Carson (25)	11-57 (2)
Ft Knox (12)	11-97 (2)
Ft Ritchie (5)	11-98 (2)
Ft Lee (5)	11-117 (2)
Ft Belvoir (5)	11-127 (2)
Ft Monroe (5)	11-155 (2)
WSMR (5)	11-157 (2)
Army Dep (2) except	11-158 (2)
LBAD (14)	11-500 (AA-AC) (KA,KB)
SAAD (30)	(2)
TOAD (14)	11-587 (2)
LEAD (7)	11-592 (2)
SHAD (3)	11-587 (2)
NAAD (5)	10-500 (AA-AC,LB-LF) (2)
SVAD (5)	32-57 (2)
CHAD (3)	32-57 (2)
ATAD (10)	32-500 (3)
PUAD (8)	

1-BLK

BLK

1-BRV

—

L

—



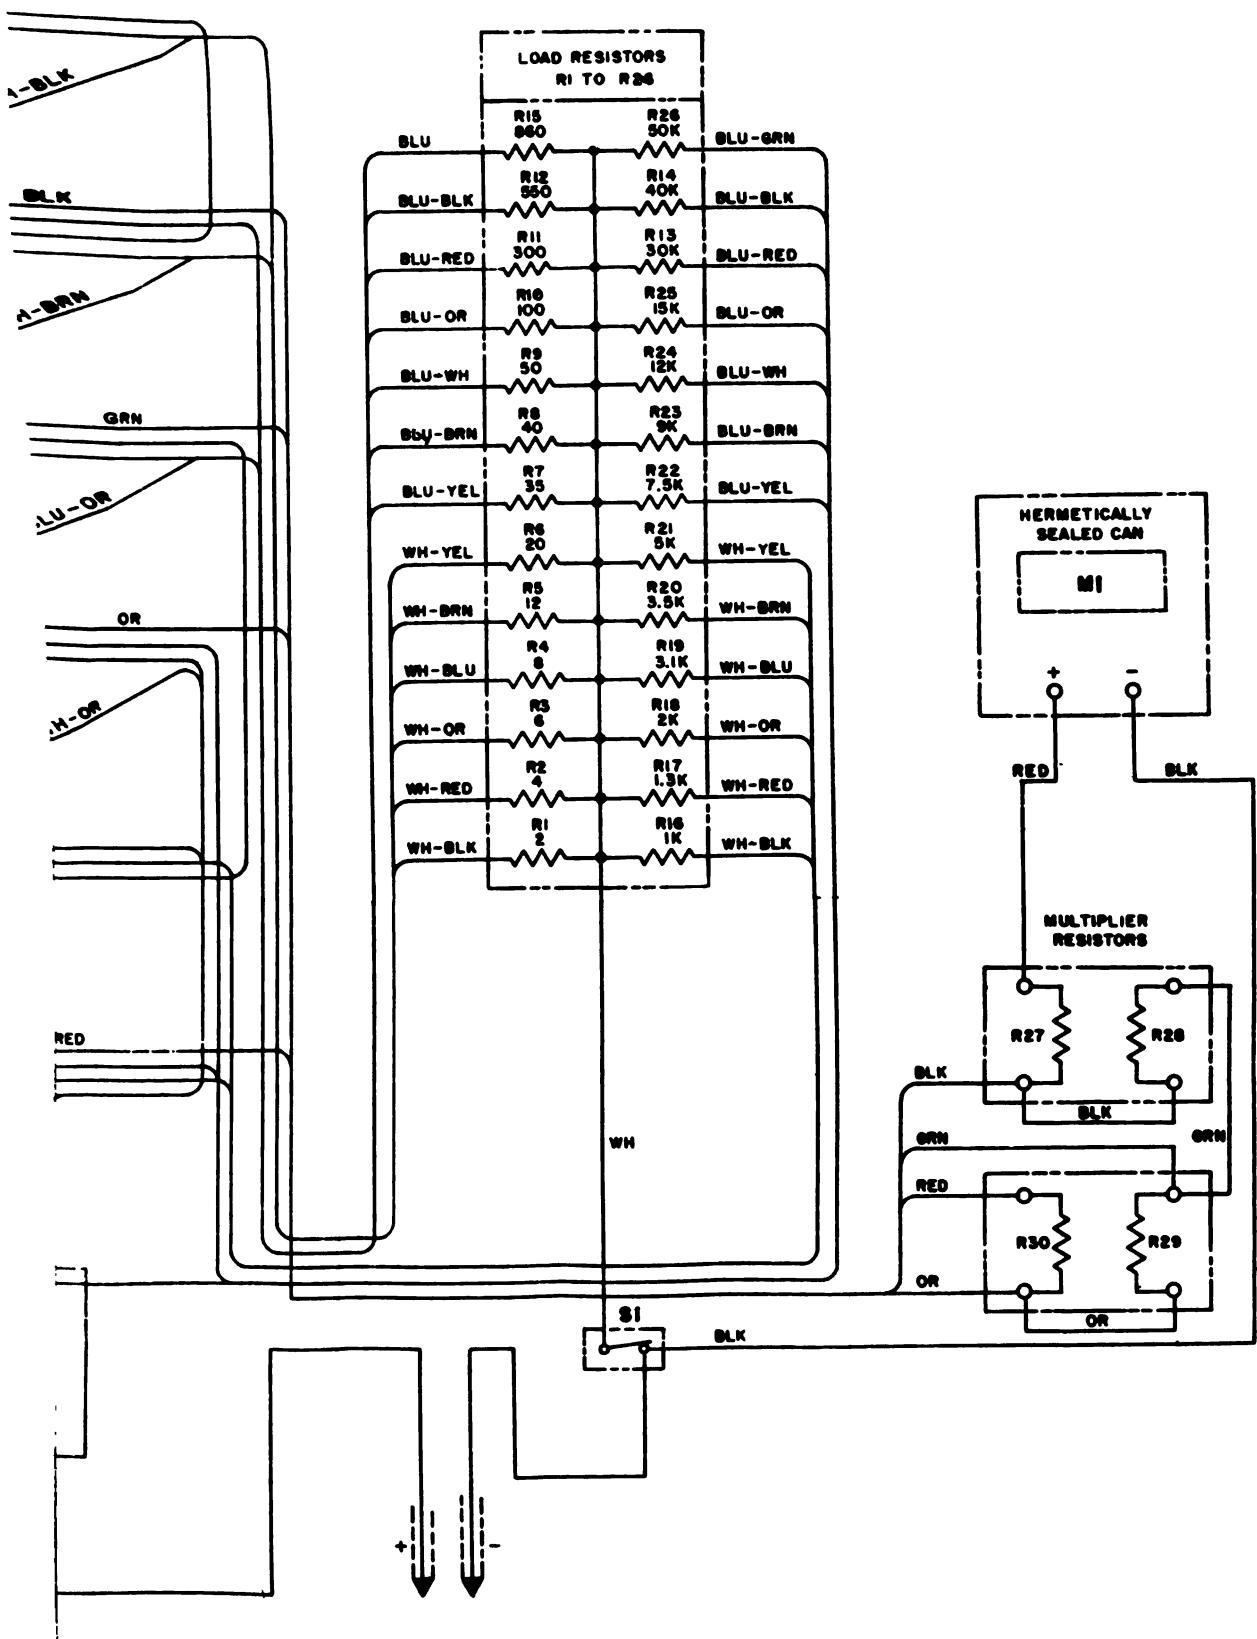


FIG 7-8. Battery Tester TS-183/U, wiring diagram.




—



—

≡



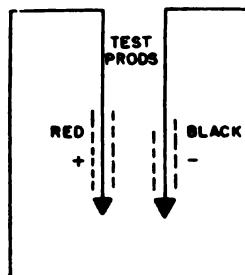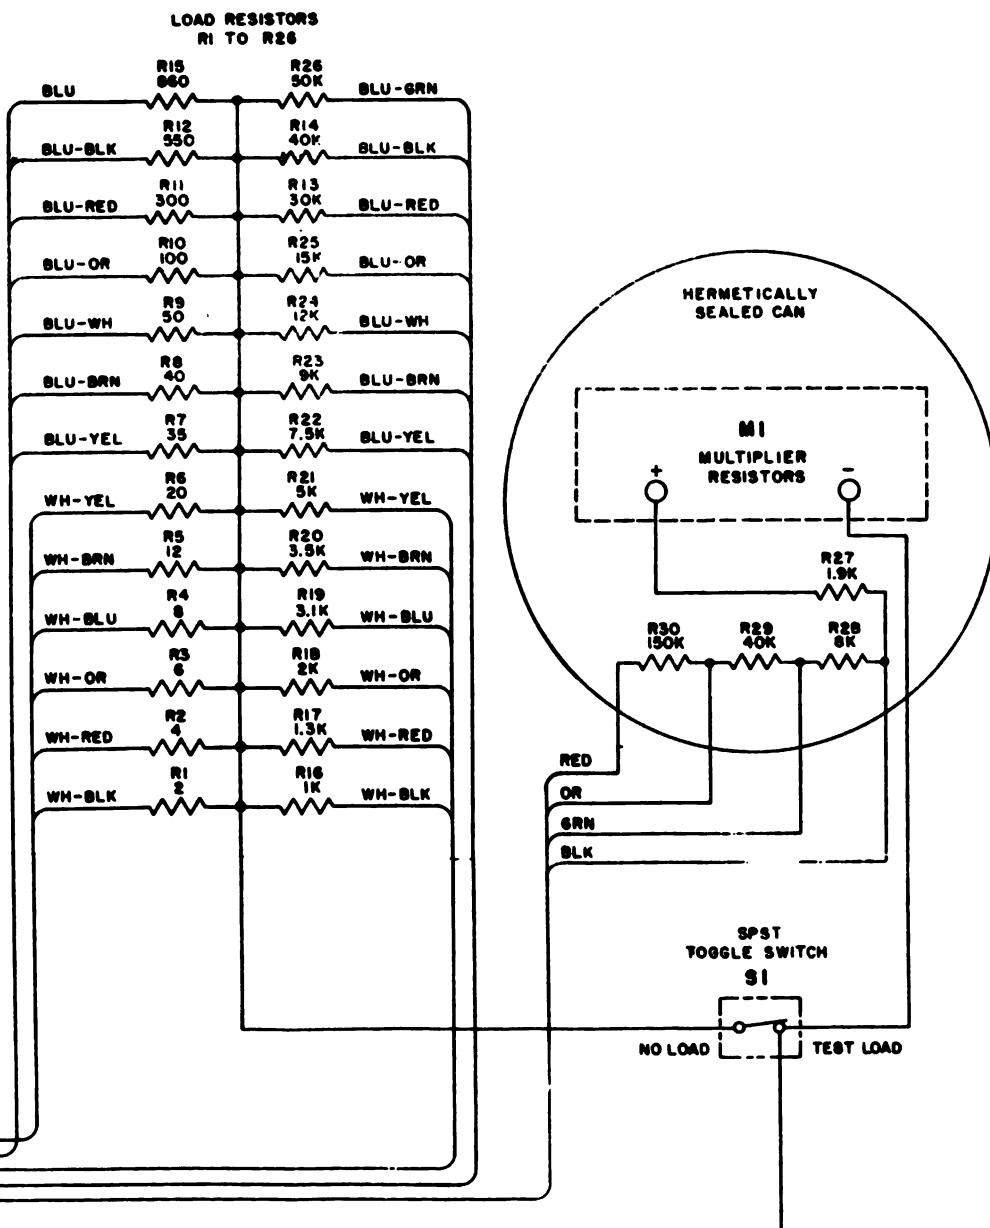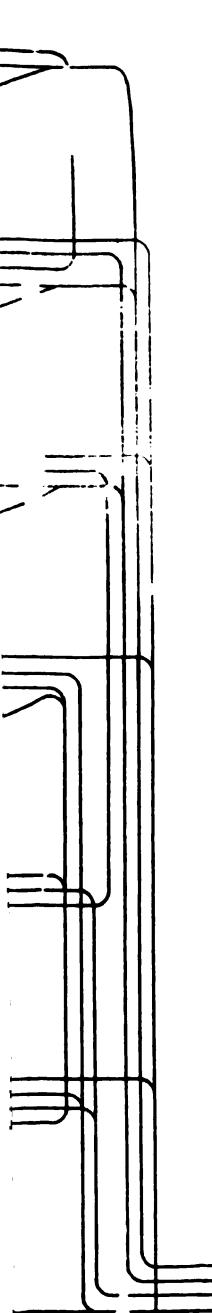


Battery Tester TS-18A/U, wiring diagram.

TM 2571-13

W-OR/BLK
W-BLK/YEL
W-BLU
W-H
W



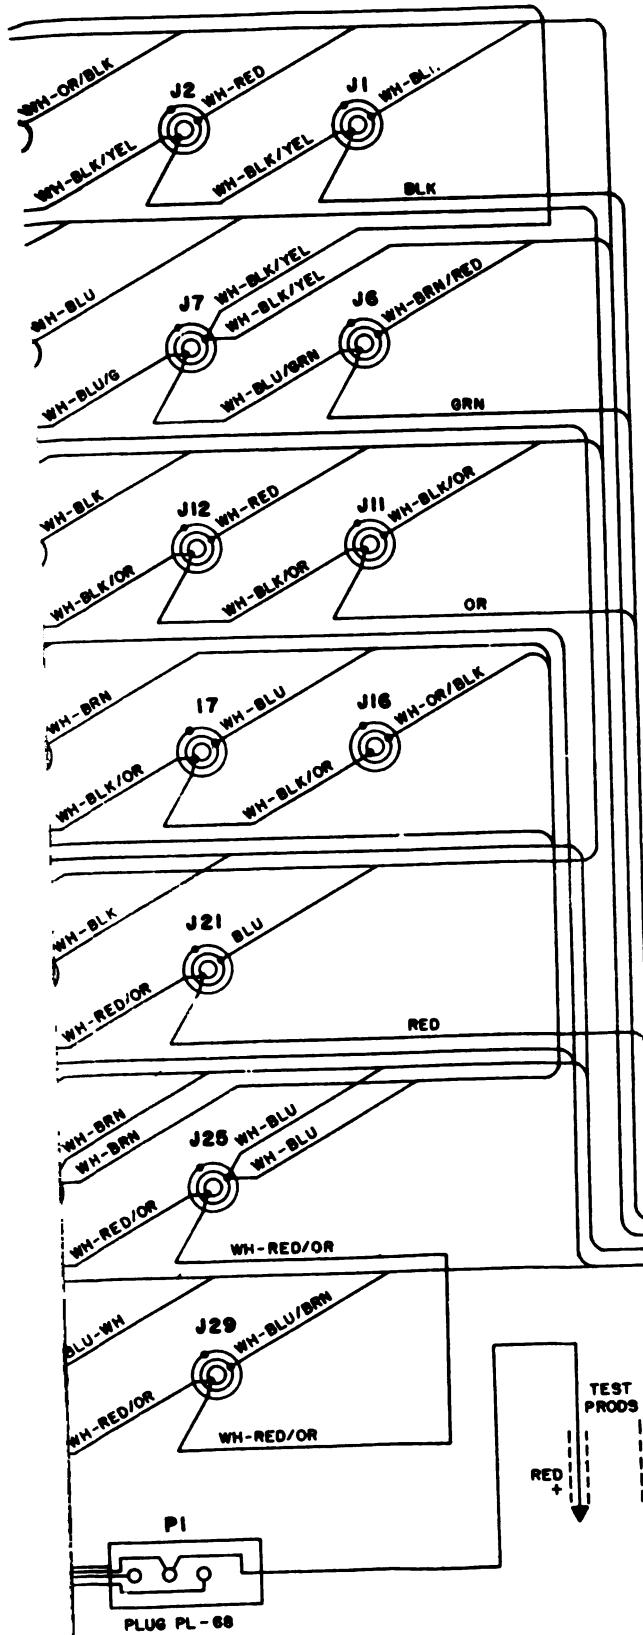

LOAD RESISTORS R1 TO R26			
WH-RED	R15 860	R26 50K	WH-BLU/BRN
WH-BLK	R12 560	R14 40K	WH-BLK
WH-RED	R11 300	R13 30K	BLU
WH-BLK/OR	R10 100	R25 15K	WH-BLK
WH-RED/OR	R9 50	R24 12K	WH-RED/BLU
WH-BRN	R8 40	R23 9K	WH-BLK/OR
WH-BLU	R7 35	R22 7.5K	WH-BLU
WH-BLK/YEL	R6 20	R21 5K	WH-BLU/BRN
WH-BRN/RED	R5 12	R20 3.5K	WH-BLU/BRN
WH-BLU	R4 8	R19 3.1K	WH-BLK/YEL
WH-OR/BLK	R3 6	R18 2K	WH-BRN
WH-RED	R2 4	R17 1.3K	WH-BLU
WH-BLK	R1 2	R16 1K	WH-OR/RED
		WH	

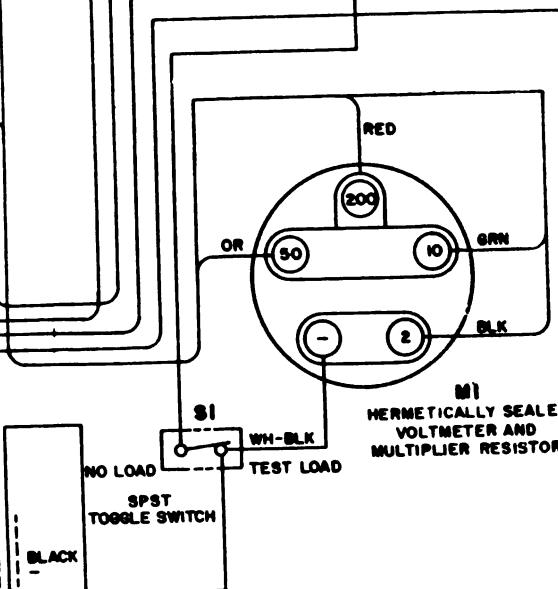


Figure 7-4. Battery Tester TS-183B/U, wiring diagram.

